



HITACHI

SERVICE MANUAL

YK**No.0288E****CT7970B/K****NTSC****G7LXU2 Chassis****R/C:CLU-350**

CONTENTS

TECHNICAL SPECIFICATIONS	1
SAFETY PRECAUTIONS	2
PRODUCT SAFETY NOTICE	3
TECHNICAL CAUTIONS	4
LOCATION OF CONTROLS	5
HOW TO SELECT CHANNELS	6
CABLE ANTENNA (CATV) OPERATION	6
TO OBTAIN THE BEST PICTURE AND SOUND	7
BASIC CIRCUIT DIAGRAM	9
PRINTED WIRING BOARD	15
WIRING DIAGRAM	19
REPLACEMENT PARTS LIST	20

CAUTION: Before servicing this chassis, it is important that the service technician read the "Safety Precaution" and "Product Safety Notices" in this Service Manual.

TECHNICAL SPECIFICATIONS

ANTENNA INPUT IMPEDANCE	75Ω (300Ω)	POWER INPUT	AC120V, 60Hz
CHANNEL COVERAGE		POWER RATING	150W
VHF BAND	2 ~ 13	CONVERGENCE	Self convergence
UHF BAND	14 ~ 69	FOCUS	Electrostatic
CATV MID BAND	A-5 ~ A-1	PICTURE TUBE	MVA68AEC00X
	A ~ I	SPEAKER	2 Woofers (60x120)
SUPER BAND	J ~ W	SOUND OUTPUT	3W x 2
HYPER BAND	W + 1 ~ W + 28	DIMENSIONS	
ULTRA BAND	W + 29 ~ W + 84	W	664 mm
RECEIVING CHANNEL	181 ch	H	595 mm
CHANNEL INDICATOR	DIGITAL / ON SCREEN	D	518 mm
INTERMEDIATE FREQUENCY		WEIGHT	41 kg
Picture I-F Carrier	45.75 MHz		
Sound I-F Carrier	41.25 MHz		
Sound I-F	4.50 MHz		

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT

SOLID STATE COLOUR TELEVISION

February 1989**YOKOHAMA WORKS**

SAFETY PRECAUTIONS

NOTICE: Comply with all cautions and safety related notes located on or inside the cabinet and on the chassis or picture tube.

WARNING: Since the chassis of this receiver is connected to one side of the AC power supply during operation, whenever the receiver is plugged in, service should not be attempted by anyone unfamiliar with the precautions necessary when working on this type of receiver.

The following precautions should be observed:

1. Do not install, remove, or handle the picture tube in any manner unless shatterproof goggles are worn. People not so equipped should be kept away while picture tubes are handled. Keep picture tube away from the body while handling.
2. When service is required, an isolation transformer should be inserted between power line and the receiver before any service is performed on a "HOT" chassis receiver.
3. When replacing a chassis in the receiver, all the protective devices must be put back in place, such as barriers, non-metallic knobs, adjustment and compartment cover-shields, isolation resistors-capacitors, etc.
4. When service is required, observe the original lead dress. Extra care should be taken to assure correct lead dress in the high voltage circuitry area.
5. Always use the manufacturer's replacement components. Especially critical components as indicated on the circuit diagram should not be replaced by other manufacture's. Furthermore where a short circuit has occurred, replace those components that indicate evidence of overheating.
6. Before returning a serviced receiver to the customer, the service technician must thoroughly test the unit to be certain that it is completely safe to operate without danger of electrical shock, and be sure that no protective device built into the receiver by the manufacturer has become defective, or inadvertently defeated during servicing.


Therefore, the following checks should be performed for the continued protection of the customer and service technician.

Leakage Current Cold Check

With the AC plug removed from the 120V AC 60Hz source, place a jumper across the two plug prongs. Turn the AC power switch on. Using an insulation tester (DC500V), connect one lead to the jumpered AC plug and touch the other lead to each exposed metal part (antennas, screwheads, metal overlays, control shafts, etc.), particularly any exposed metal part having a return path to the chassis. Exposed metal parts having a return path to the chassis should have a minimum resistor reading of $0.3M\Omega$ and a maximum resistor reading of $5M\Omega$. Any resistance value below or above this range indicates an abnormality which requires corrective action. Exposed metal parts not having a return path to the chassis will indicate an open circuit.

Leakage Current Hot Check

Plug the AC line cord directly into a AC 120V 60Hz outlet (do not use an isolation transformer for this check). Turn the AC power switch on. Using a "leakage Current Tester (Simpson Model 229 or equivalent)", measure for current from all exposed metal parts of the cabinet (antennas, screwheads, metal overlays, control shafts, etc.), particularly any exposed metal part having a return path to the chassis, to a known earth ground (water pipe, conduit, etc.). Any current measured must not exceed 0.5mA.

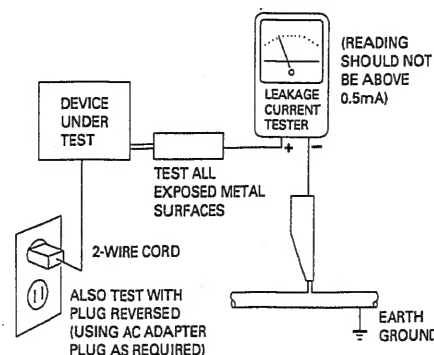

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE RECEIVER TO THE CUSTOMER.

High Voltage


This receiver is provided with a hold down circuit for clearly indicating that voltage has increased in excess of a predetermined value. Comply with all notes described in this Service Manual regarding this hold down circuit when servicing, so that this hold down circuit is operated correctly.

Serviceman warning

With minimum Black Level and Picture, the operating high voltage in this receiver is lower than 32.0kV. In case any component having influence on the high voltage is replaced, confirm that high voltage with minimum Black Level and Picture is lower than 32.0kV.

To measure H.V. use a high impedance H.V. meter. Connect (-) to chassis earth and (+) to the CPT anode button (See the following connection diagram).

NOTE: Turn the power switch off without fail before the connection to the Anode button is made.

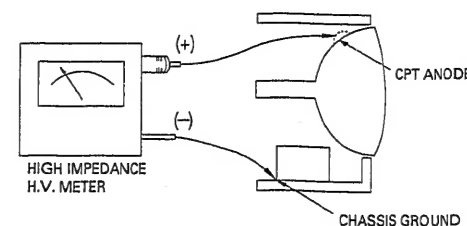**X-radiation**

TUBE: The primary source of X radiation in this receiver is the picture tube. The tube utilized in this chassis is specially constructed to limit X radiation emission.

For continued X radiation protection, the replacement tube must be the same type as the original, HITACHI approved type.

When troubleshooting and making test measurements in a receiver with an excessive high voltage problem, avoid coming unnecessarily close to the picture tube and the high voltage component. Do not operate the chassis longer than is necessary to locate the cause of the excessive voltage.

PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in HITACHI television receiver have special safety related characteristics. These are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual. Electrical components having such features are identified with a Δ mark in the schematics and parts list in this Service Manual.


The use of a substitute replacement component which does not have the same safety characteristics as the HITACHI recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, X-radiation, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current HITACHI Service Manual. A subscription to, or additional copies of, HITACHI Service Manual may be obtained at a nominal charge from HITACHI SALES CORPORATION.

TECHNICAL CAUTIONS

High voltage limiter circuit operation check

1. Connect the high voltage voltmeter between the CPT anode terminal (anode cap) and ground (TP02 or TP (GND)) as shown below.
2. Set the AC input voltage to $132 \pm 3V$.
3. Receive the broadcast signal and set the picture level to maximum and the black level to the center. Adjust the screen VR and sub brightness VR so that beam current is $1.50 \pm 0.1mA$. (The voltage at ABL terminal of FBT (between both ends of C770) should be 9V or less at this time.)
4. Check that the constant high voltage is 27.2kV at this time.
5. Set the AC input voltage to $100 \pm 5V$ and then short-circuit both ends of D603 and R910A.
6. Leave the settings of the picture, black level and screen VRs as in item (3) and gradually increase the AC input voltage. Check that the picture disappears when the high voltage is less than 33.0kV.
7. Turn the switch of the set off immediately after checking that the picture disappears.

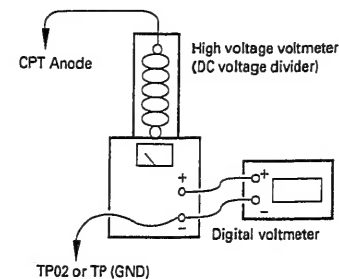

Use the voltmeter which can indicate up to the first decimal point, with an input impedance of 10 MΩ or more.

Fig. 1


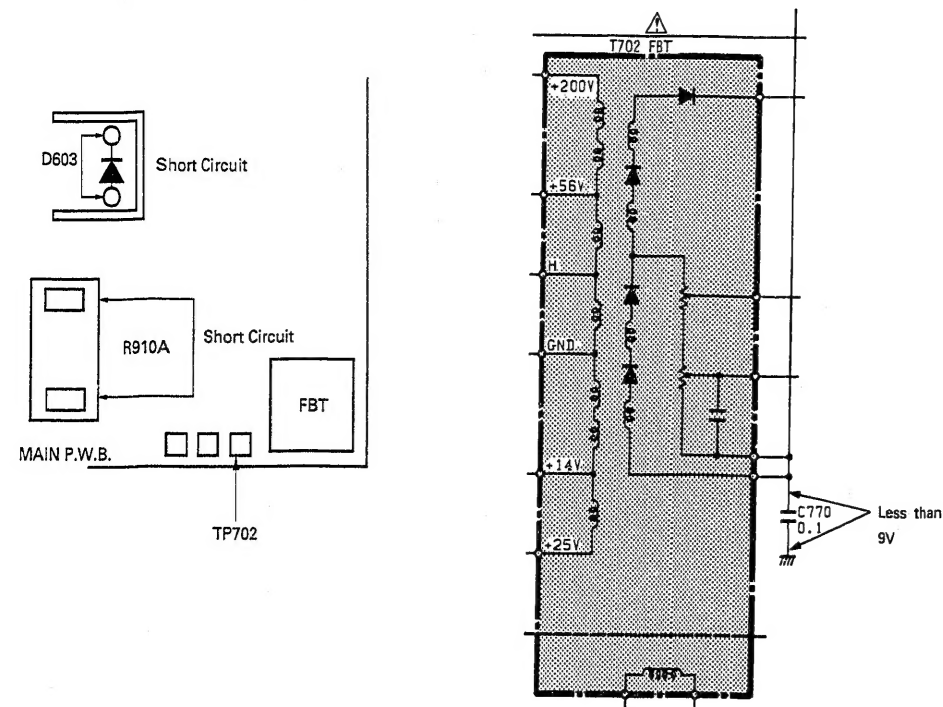



Fig. 2

LOCATION OF CONTROLS

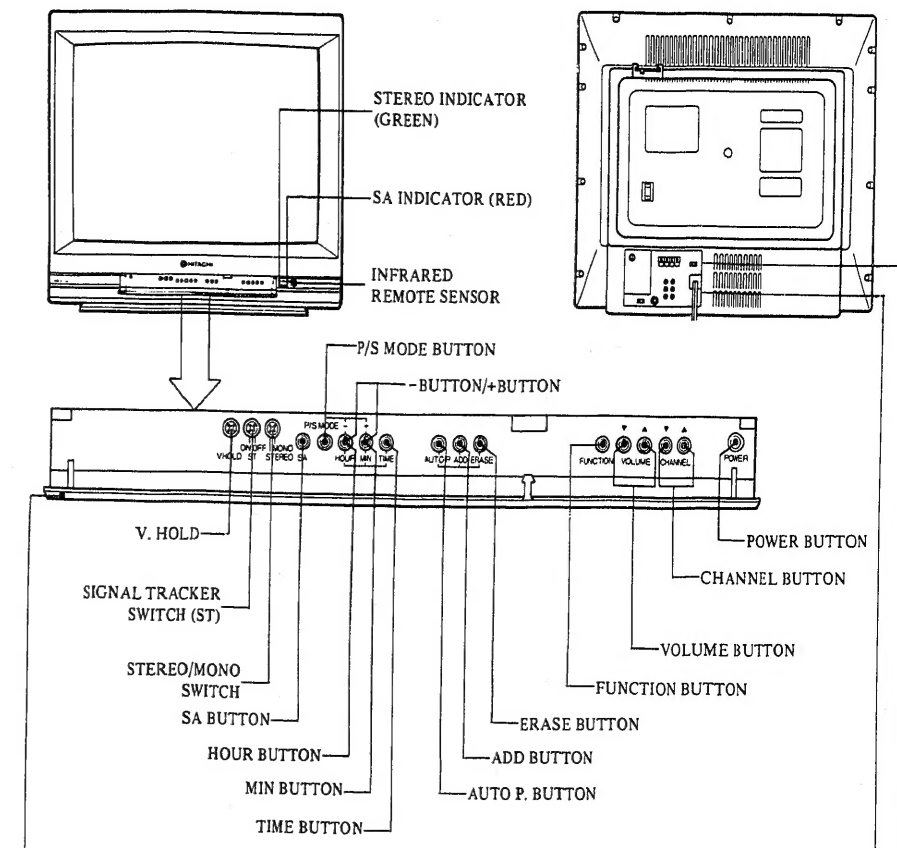

HOW TO OPEN THE DOOR

1. Push letters "PUSH-OPEN" on the door.
2. Pull the door toward the front to open it.

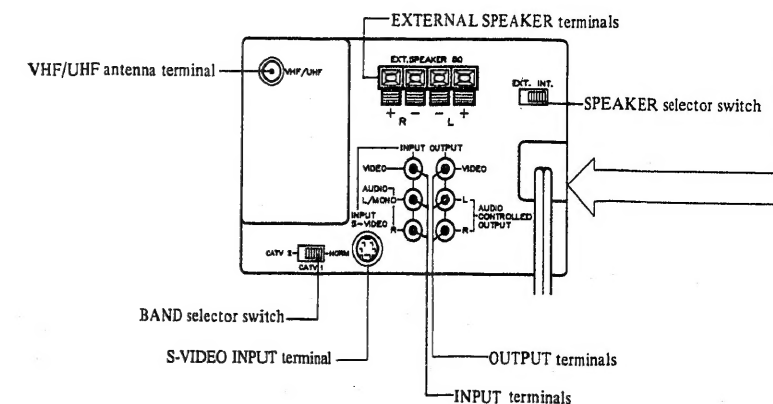

HOW TO SELECT CHANNELS

STEP 1 TURNING THE SET ON – **(POWER BUTTON)**

Push the POWER BUTTON to turn the set ON. (To turn the set OFF, push the POWER BUTTON again.)

STEP 2 VOLUME CONTROL – **(VOLUME BUTTON)**

Push the right side (▲: UP) of the VOLUME BUTTON to make the sound louder, and the left side (▼: DOWN) of the VOLUME BUTTON to make the sound softer. Variation of the volume is displayed at the upper part of the screen with numerals 0 ~ 63 and by the color bar. (Fig. 1)

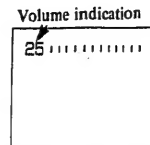


Fig. 1

STEP 3 FUNCTION SELECTION – **(FUNCTION BUTTON)**

Every time you press the FUNCTION BUTTON, the set alternates between the TV mode and FUNCTION mode. To watch the TV, set to the TV mode. At this time, the channel number is displayed at the upper right of the screen. To enjoy a VCR, set to the FUNCTION mode.

STEP 4 CHANNEL SELECTION – **(CHANNEL BUTTON)**

Channel selection may be performed by pressing either the CHANNEL BUTTON UP (▲) or DOWN (▼). When pressing the right side (▲: UP) of the CHANNEL BUTTON, the next higher channel is selected. And when pressing the left side (▼: DOWN) of the CHANNEL BUTTON, the next lower channel is selected. The No. of the channel to which the TV is tuned is displayed at the upper right side of the screen.

The channel No. selected is displayed for approx. 8 seconds after changing channels and disappears automatically. (The channel No. is indicated for 4 sec. in large letters, then indicated for 4 sec. in small letters, and then disappears.) (When you turn the set ON, the channel No. is displayed on the screen for approx. 15 seconds.)


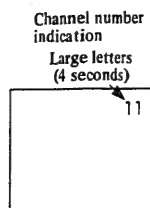


Fig. 2

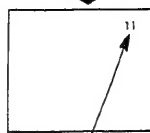

Small letters (4 seconds)

CABLE ANTENNA (CATV) OPERATION

Your TV can receive Cable Antenna (CATV) channels. (See the table "RECEPTION BAND".) To receive CATV channels, please operate as follows.

STEP 1 CATV ANTENNA CONNECTION

Connect your CATV cable to the antenna terminal board.

STEP 2 BAND SELECTION – **(BAND SELECTOR SWITCH)**

The BAND SELECTOR SWITCH is installed at the back of the set. Your TV can receive 12 VHF channels, 56 UHF channels and 125 CATV channels. Choose the required reception band by sliding the BAND SELECTOR SWITCH shown as in Fig. 1.

■ When shipped from the factory, this switch is set to the "NORM" position.

Set the BAND SELECTOR SWITCH on the back of the set to CATV 1 for normal CATV operation. (Fig. 2)

*If the special channel frequencies that are known as the HRC. (Harmonically Related Carrier) system are used with your cable system, set the BAND SELECTOR SWITCH to CATV 2.

RECEPTION BAND	
NORM	CATV1 or CATV2
VHF 2 ~ 13 ch	VHF 2 ~ 13 ch
UHF 14 ~ 69 ch	Mid band A ~ I, A-5 ~ A-1 Super band J ~ W Hyper band W+1 ~ W+28 Ultra band W+29 ~ W+84

Fig. 1

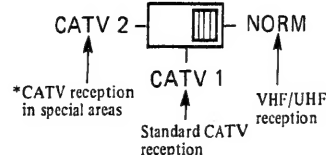


Fig. 2

STEP 3 CHANNEL SELECTION – **(CHANNEL BUTTON)**

CATV channel selection can be done with the CHANNEL BUTTON UP (▲) or DOWN (▼) as with VHF/UHF channels. When receiving CATV 2 ~ 13 channels, 2 ~ 13 is indicated on the screen. When receiving Mid band channels, A ~ I, 14 ~ 22 is indicated, and when receiving Super Band channels J ~ W, 23 ~ 36 is indicated. When receiving Hyper band channels W+1 ~ W+28, 37 ~ 64 is indicated, when receiving Mid band A-5 ~ A-1, 95 ~ 99 is indicated, and when receiving Ultra band channels W+29 ~ W+58, W+59 ~ W+84, 65 ~ 94 and 100 ~ 125 is indicated.

Note: If the reception of certain CATV channels is poor or not possible in the CATV 1 position, set the BAND SELECTOR SWITCH to CATV 2.


TO OBTAIN THE BEST PICTURE AND SOUND

To control P. MODE (PICTURE, TINT, COLOR, BLACK LEVEL, SHARPNESS, WHITE CONTROL) and S. MODE (BALANCE, BASS, TREBLE), follow the instructions below. They are set to normal position when shipped from the factory.

P/S MODE BUTTON

Choose the required display, as nine kinds of display will be shown in the following order every time you press the P/S MODE BUTTON.

On-screen Display Order of P/S MODE

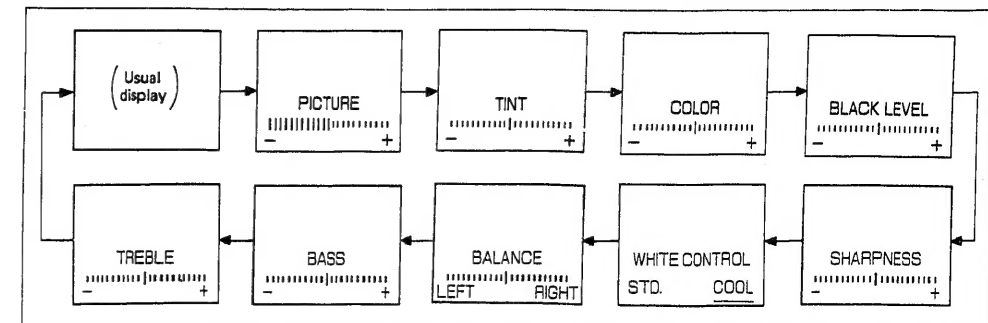
**+ BUTTON/- BUTTON**

Use the + and - BUTTONS for control.

When you press the + BUTTON, the cursor moves to the right, and when you press the - BUTTON, the cursor moves to the left, as the state of control is changed (as for PICTURE, the number of color bars is increased or decreased. For WHITE CONTROL, underline moves).

For best results, refer to the following section on OPERATION.

OPERATION

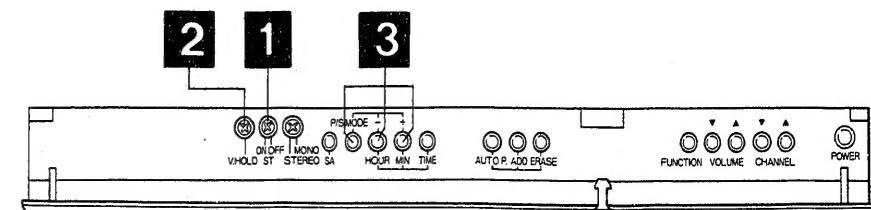


1	SIGNAL TRACKER (ST)	ST is to automatically control variation of color tone between channels. To engage ST, turn the ST switch "OFF", then set the TINT control and COLOR control to the best position, and then turn the ST switch "ON". This is the best way to obtain the best picture. But you can adjust the TINT and the COLOR to your preference even when ST is left "ON".
2	VERTICAL HOLD (V. HOLD)	If the picture moves up or down ("rolls"), adjust the Vertical Hold control until the picture stops rolling.

3	P. MODE	PICTURE The PICTURE control is used to adjust contrast, the black level and the color all at once. When the + button is pressed (the indicator moves to the right), the black level is increased, contrast becomes greater and the color becomes deeper.
		TINT When the — button is pressed (the cursor moves to the left), flesh tones will be tinted purple, and when the + button is pressed (the cursor moves to the right), they will be green. With the TINT control set at the point where flesh tones appear most real and natural, all other colors will appear normal.
		COLOR The COLOR control sets the intensity of colors. Set this control to where the colors appear normal in intensity and brilliance.
		BLACK LEVEL Set this control until the portions of the picture you know to be black appear black.
		SHARPNESS When the — button is pressed (the cursor moves to the left) to get a softer picture and when the + button is pressed (the cursor moves to the right) to get a sharper picture.
		WHITE CONTROL You can adjust the white balance (hue) of the picture to your own color preference. When shipped from the factory, this is set to "COOL".
	S. MODE	BALANCE Permits adjustment of the balance of the sound from the left and right speakers.
		BASS Press the + Button (the cursor moves to the right) to get low frequency sound and press the — Button to cut low frequency sound.
		TREBLE Press the + Button (the cursor moves to the right) to get high frequency sound and press the — Button to cut high frequency sound.

- Notes:**
1. Use the VR driver in the accessory bag to adjust the ST, STEREO/MONO and V. HOLD.
 2. The P/S mode display disappears automatically after 4 seconds and press again to return to the previous P/S mode display.


PRODUCT SAFETY NOTE: Components marked with a Δ and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the **PRODUCT SAFETY NOTICE** of this Service Manual. Don't degrade the safety of the receiver through improper servicing.


BASIC CIRCUIT DIAGRAM

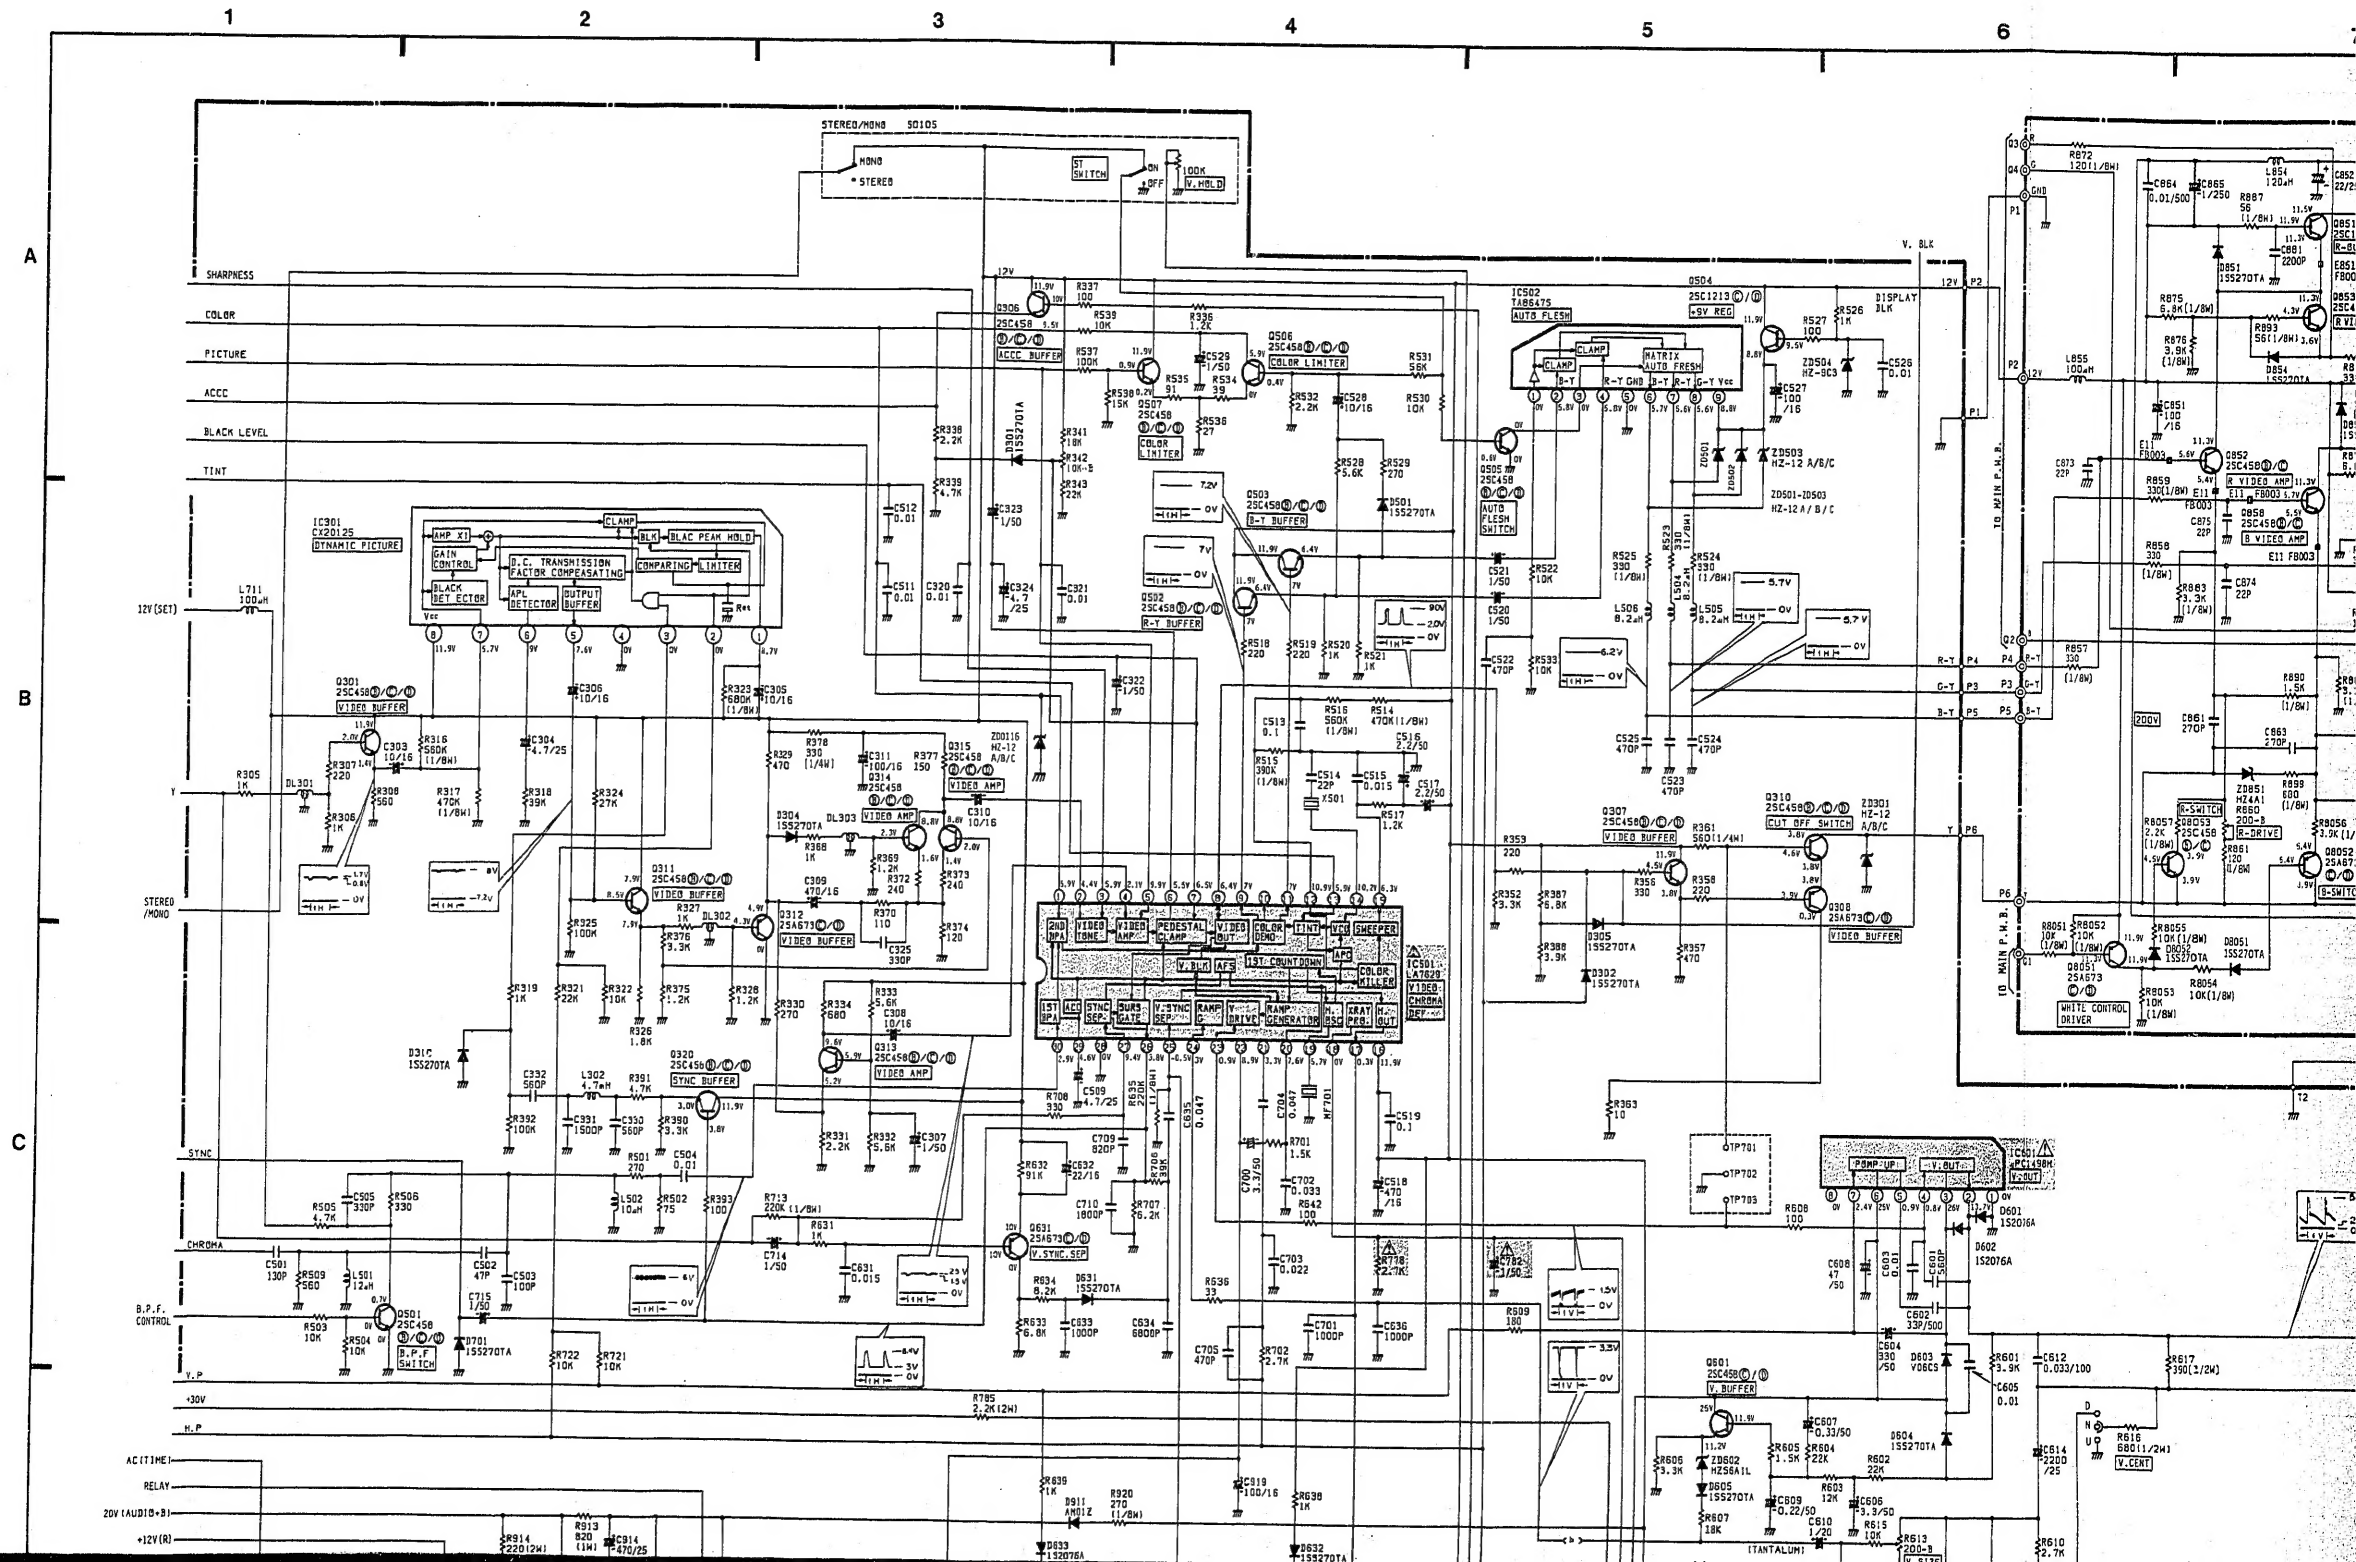


and have special characteristics important to
PRODUCT SAFETY NOTICE of this Service

BASIC CIRCUIT DIAGRAM

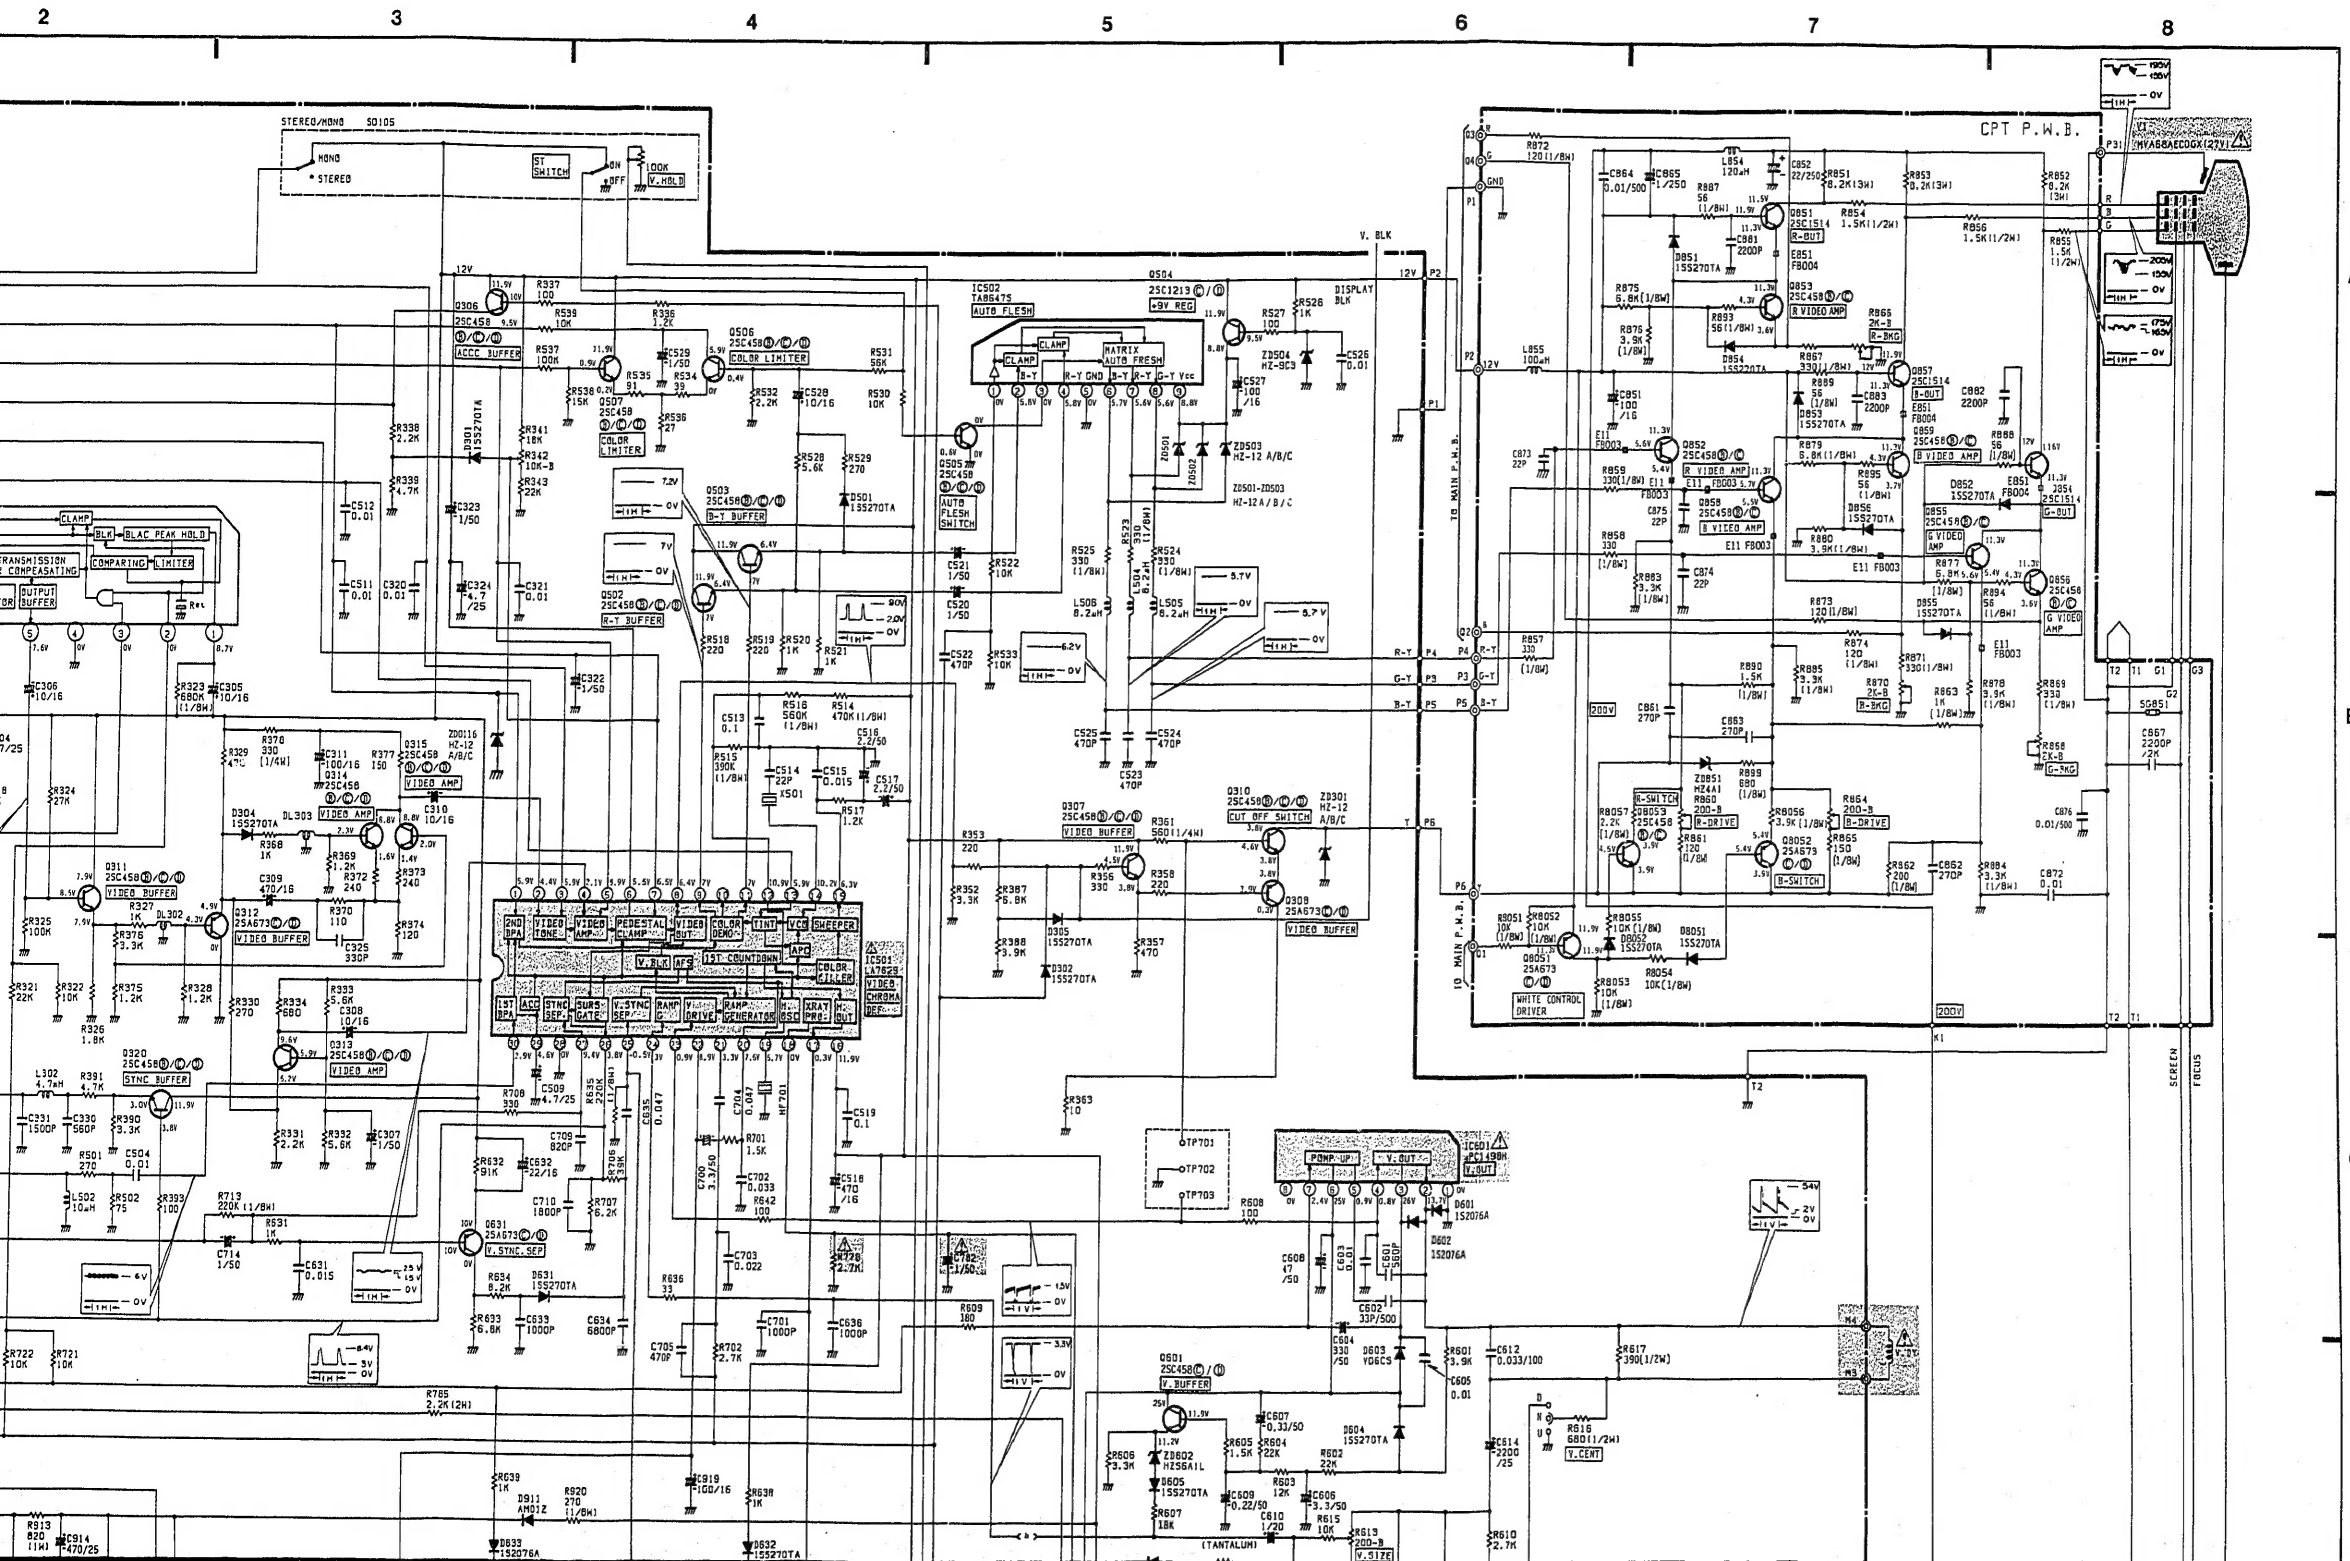

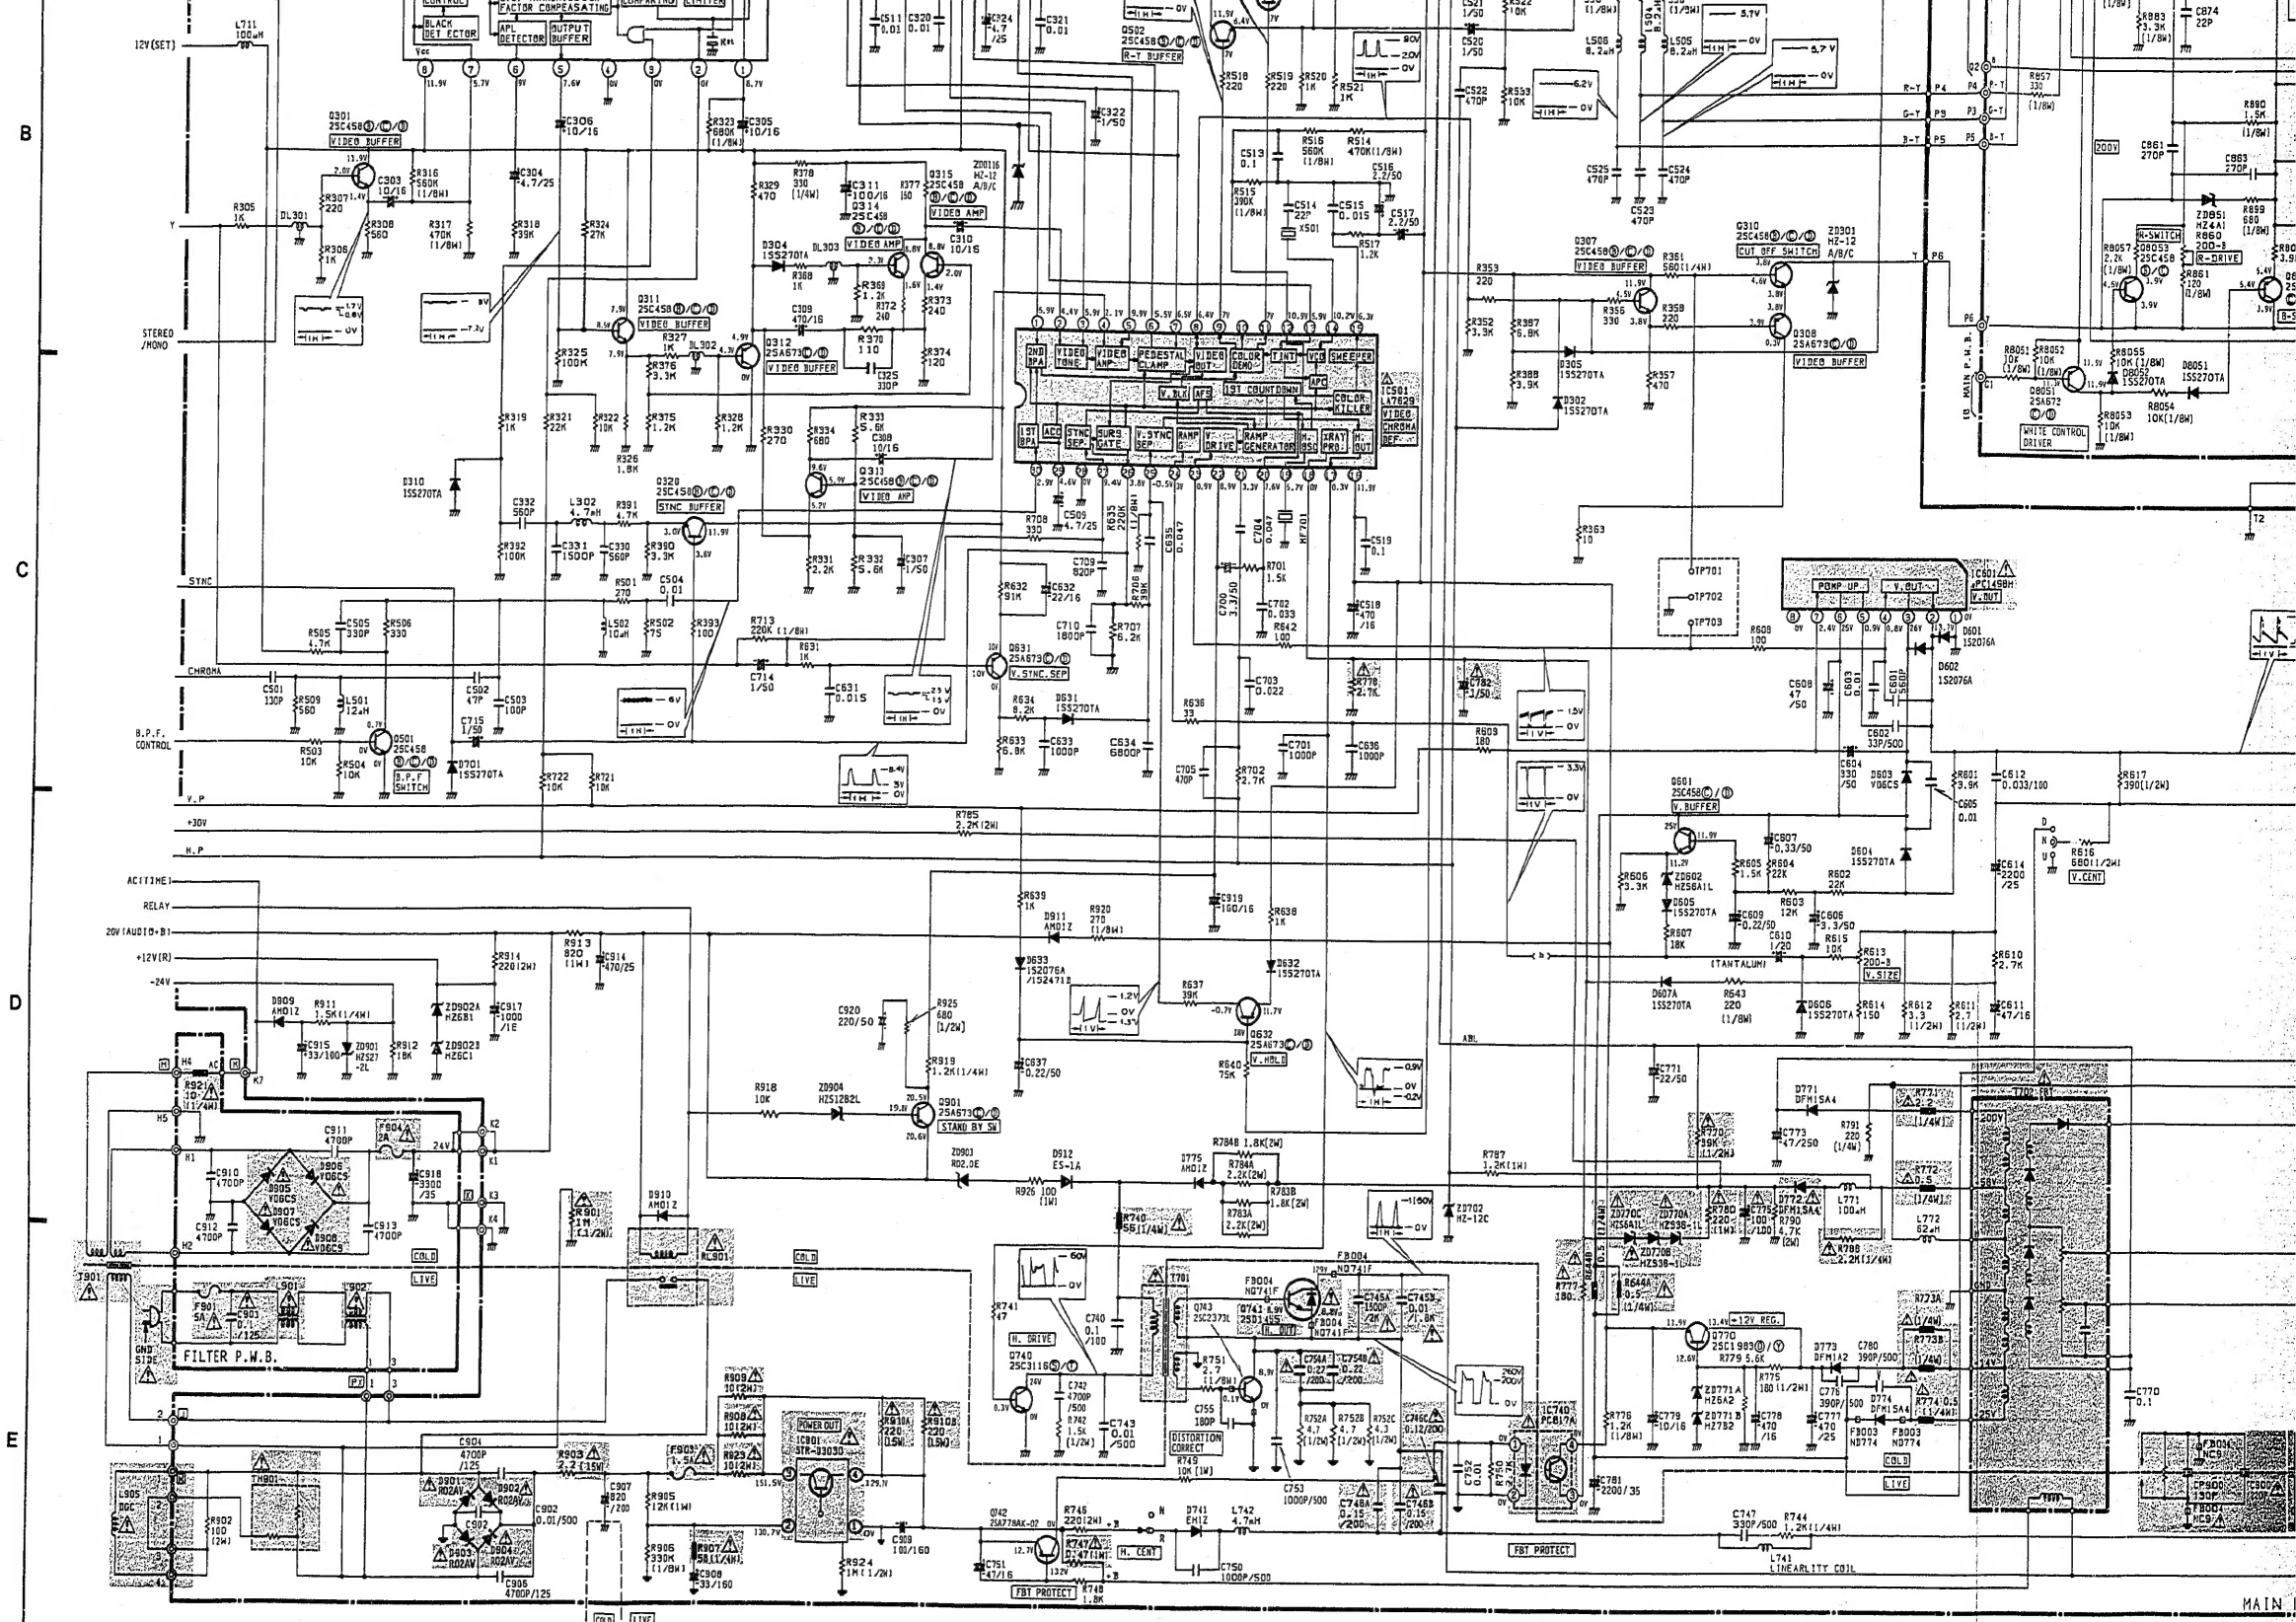


 - Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.
- All DC voltage to be measured with a tester (100k Ω /V).
- Voltage taken on a complex color bar signal including a standard color bar signal.





CT7970B/K


BASIC CIRCUIT DIAGRAM

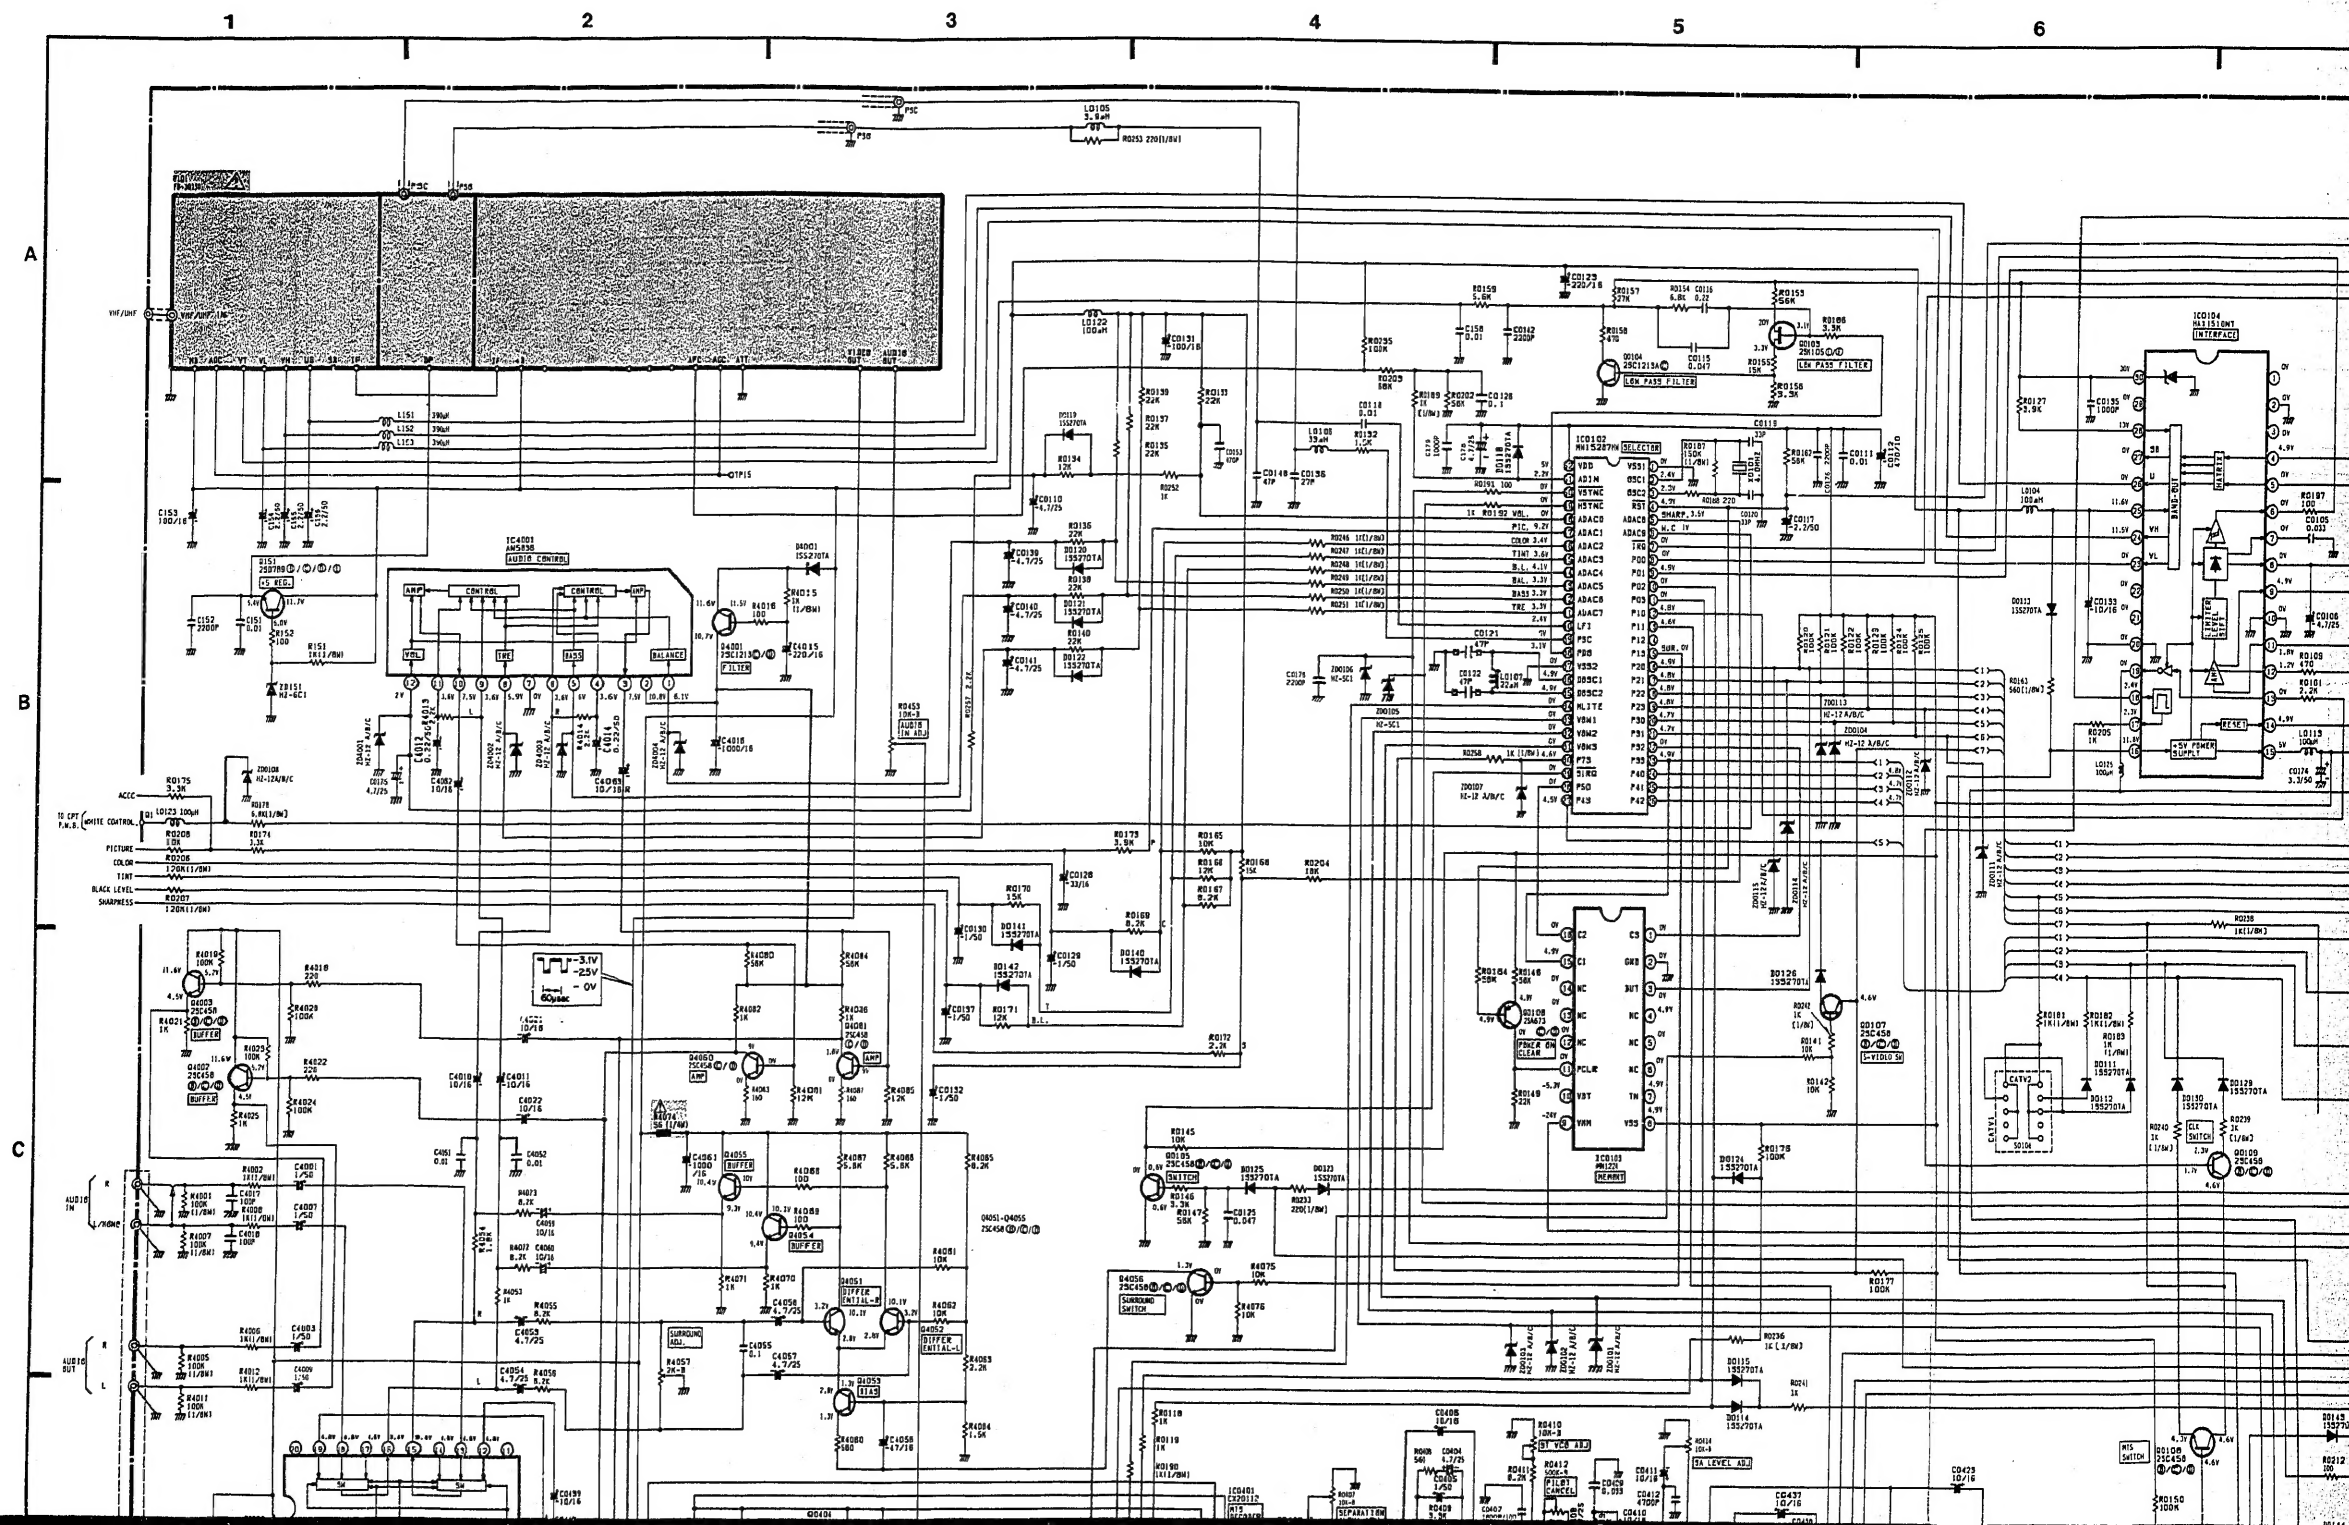

BASIC CIRCUIT DIAGRAM

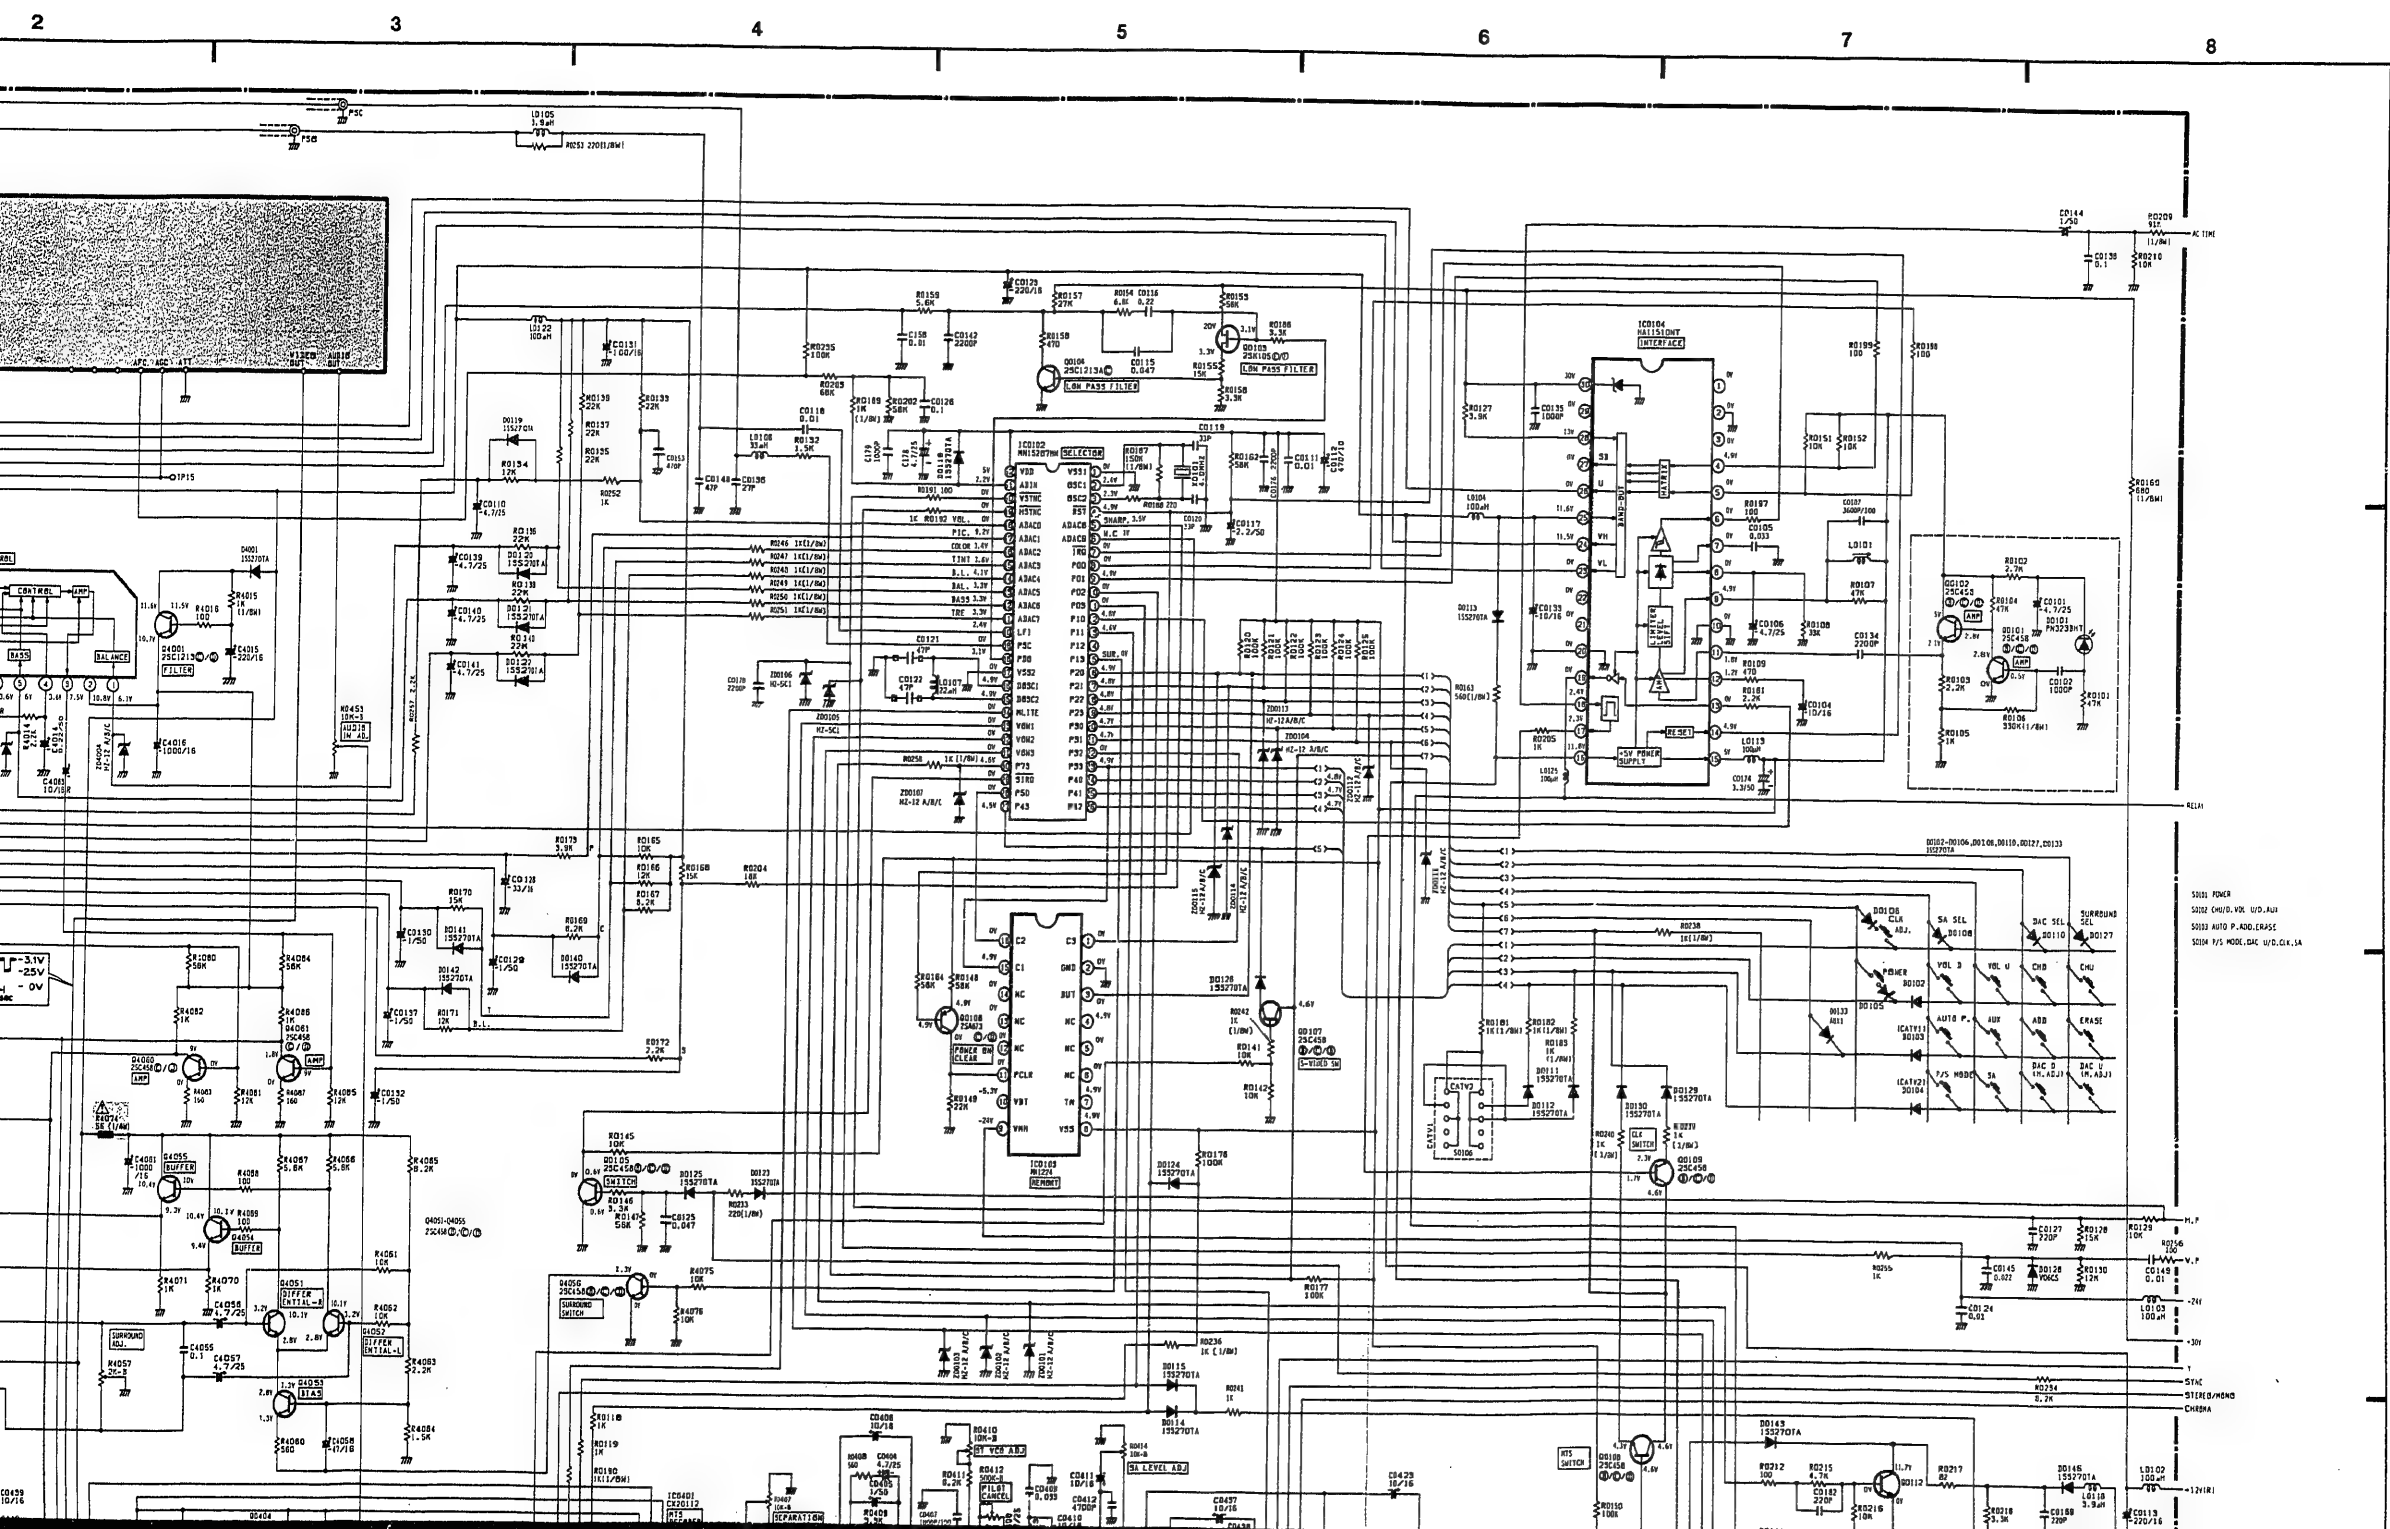

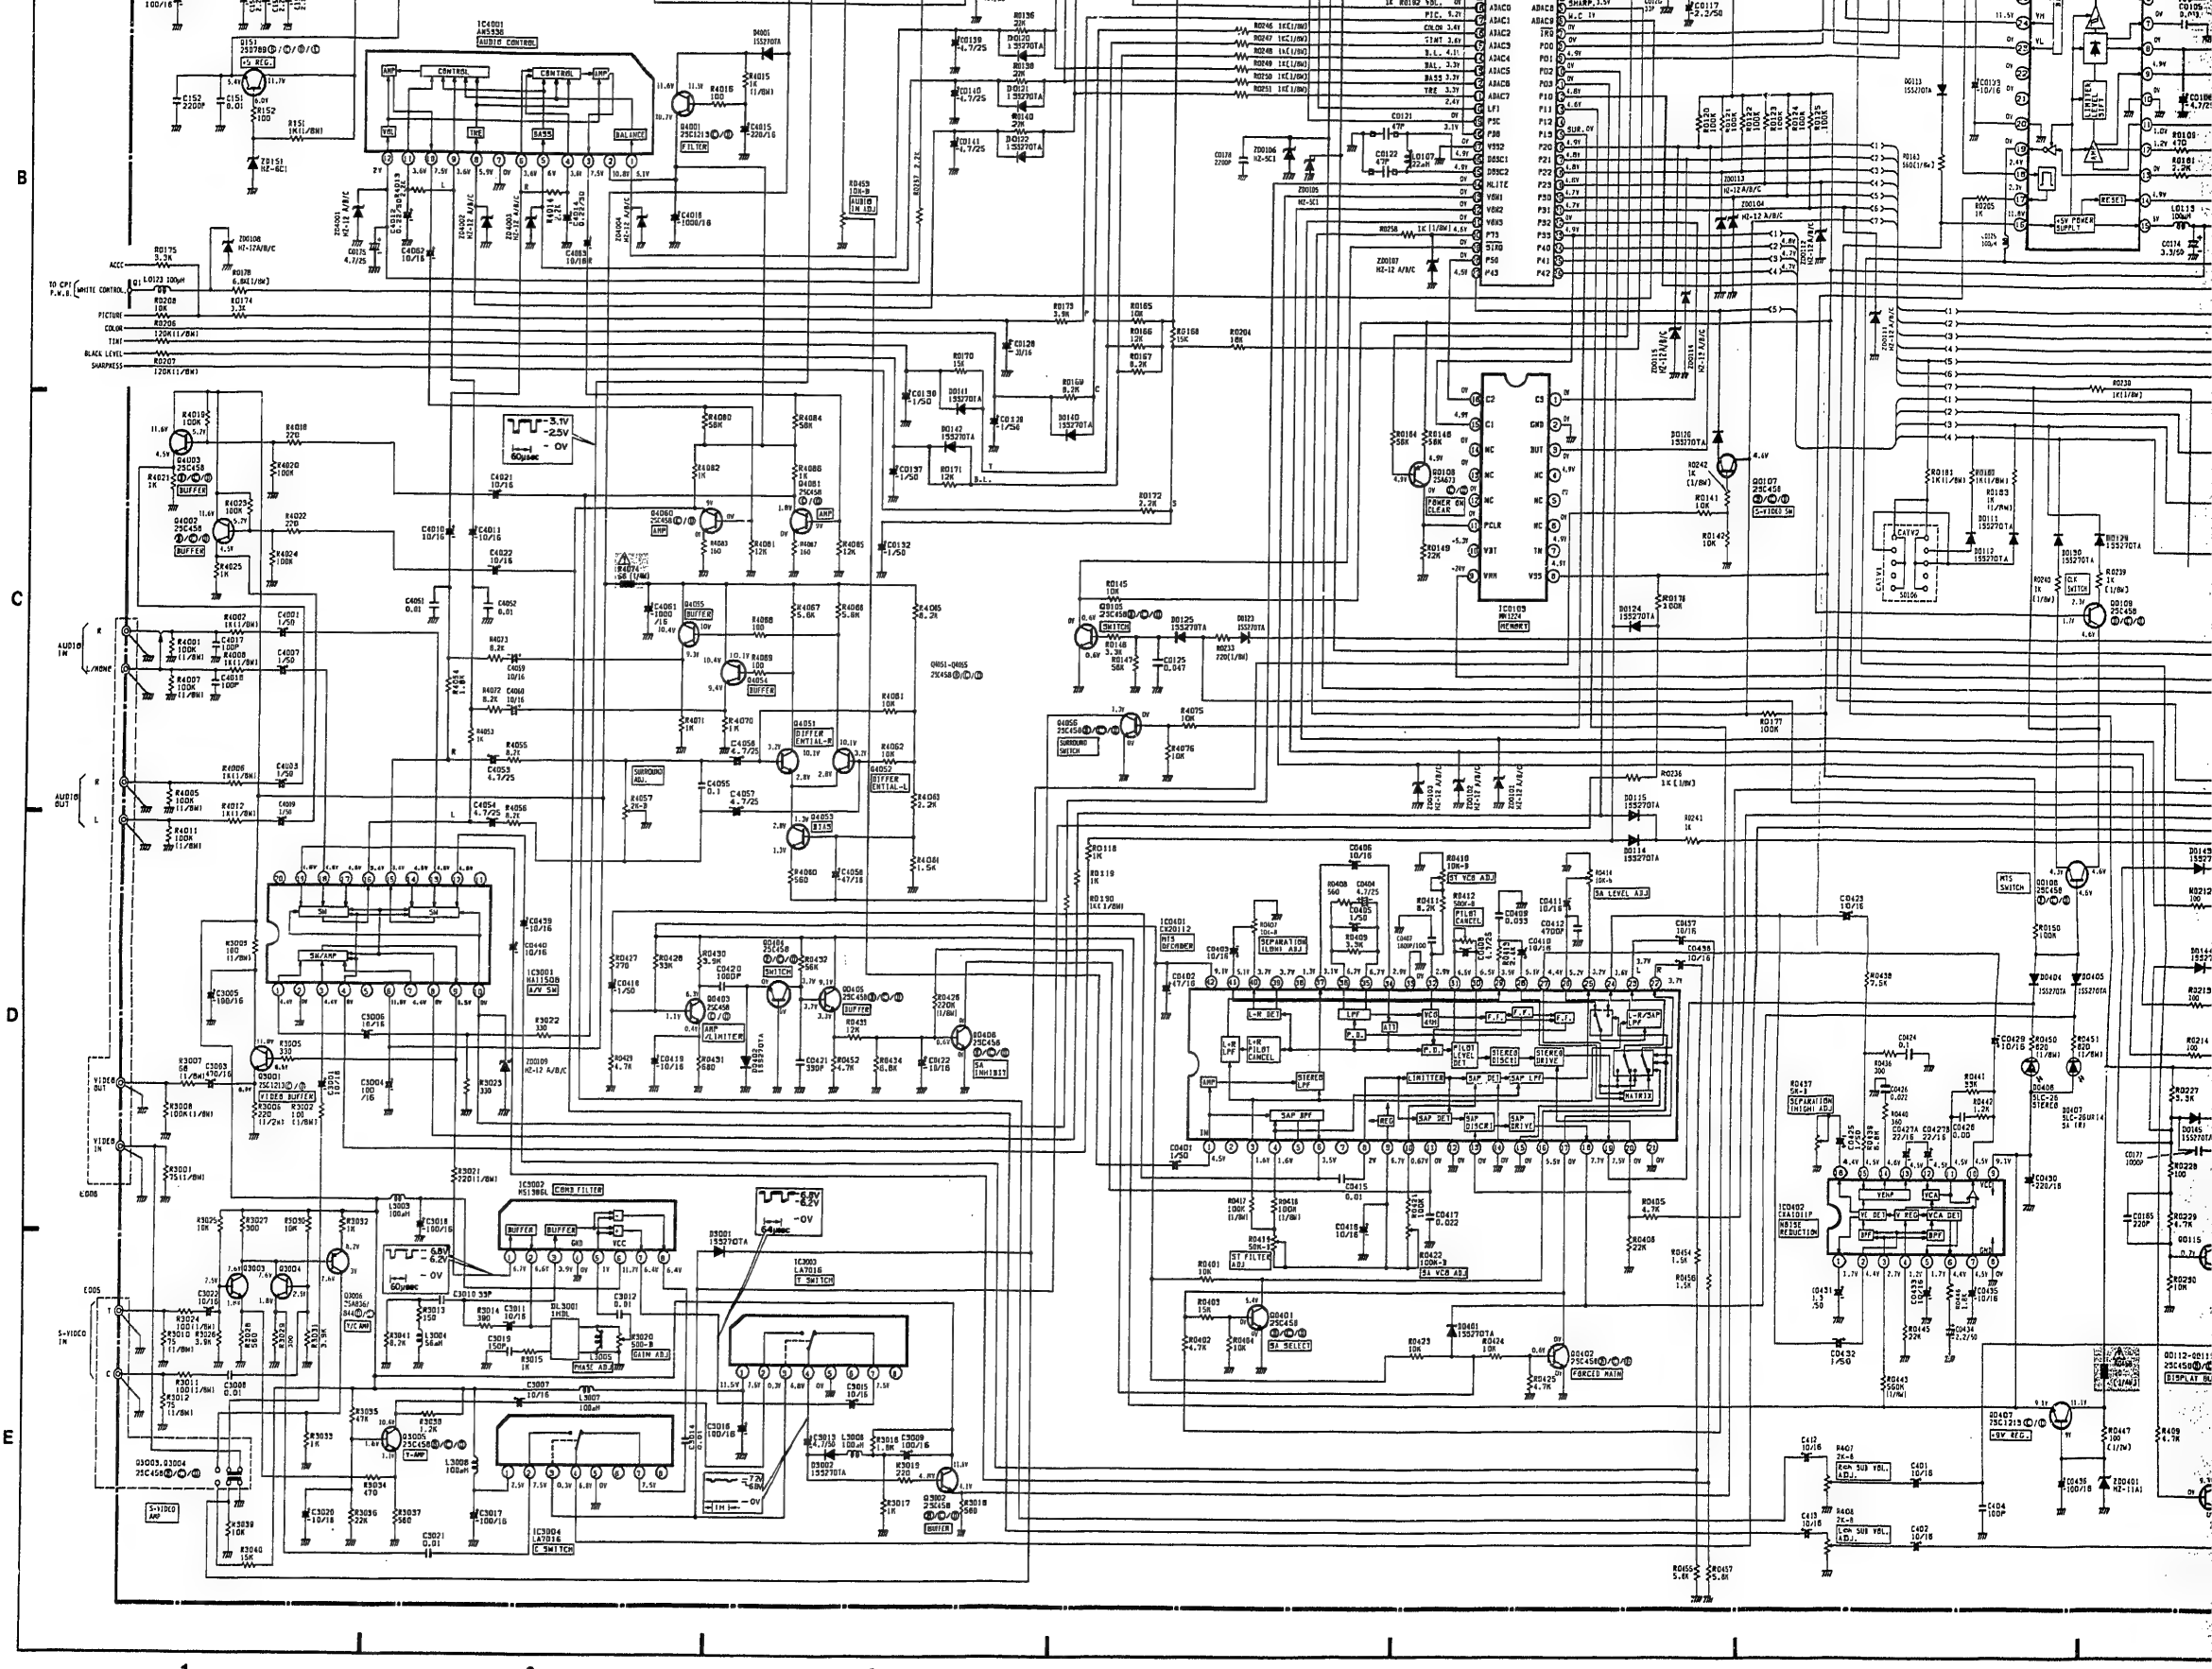

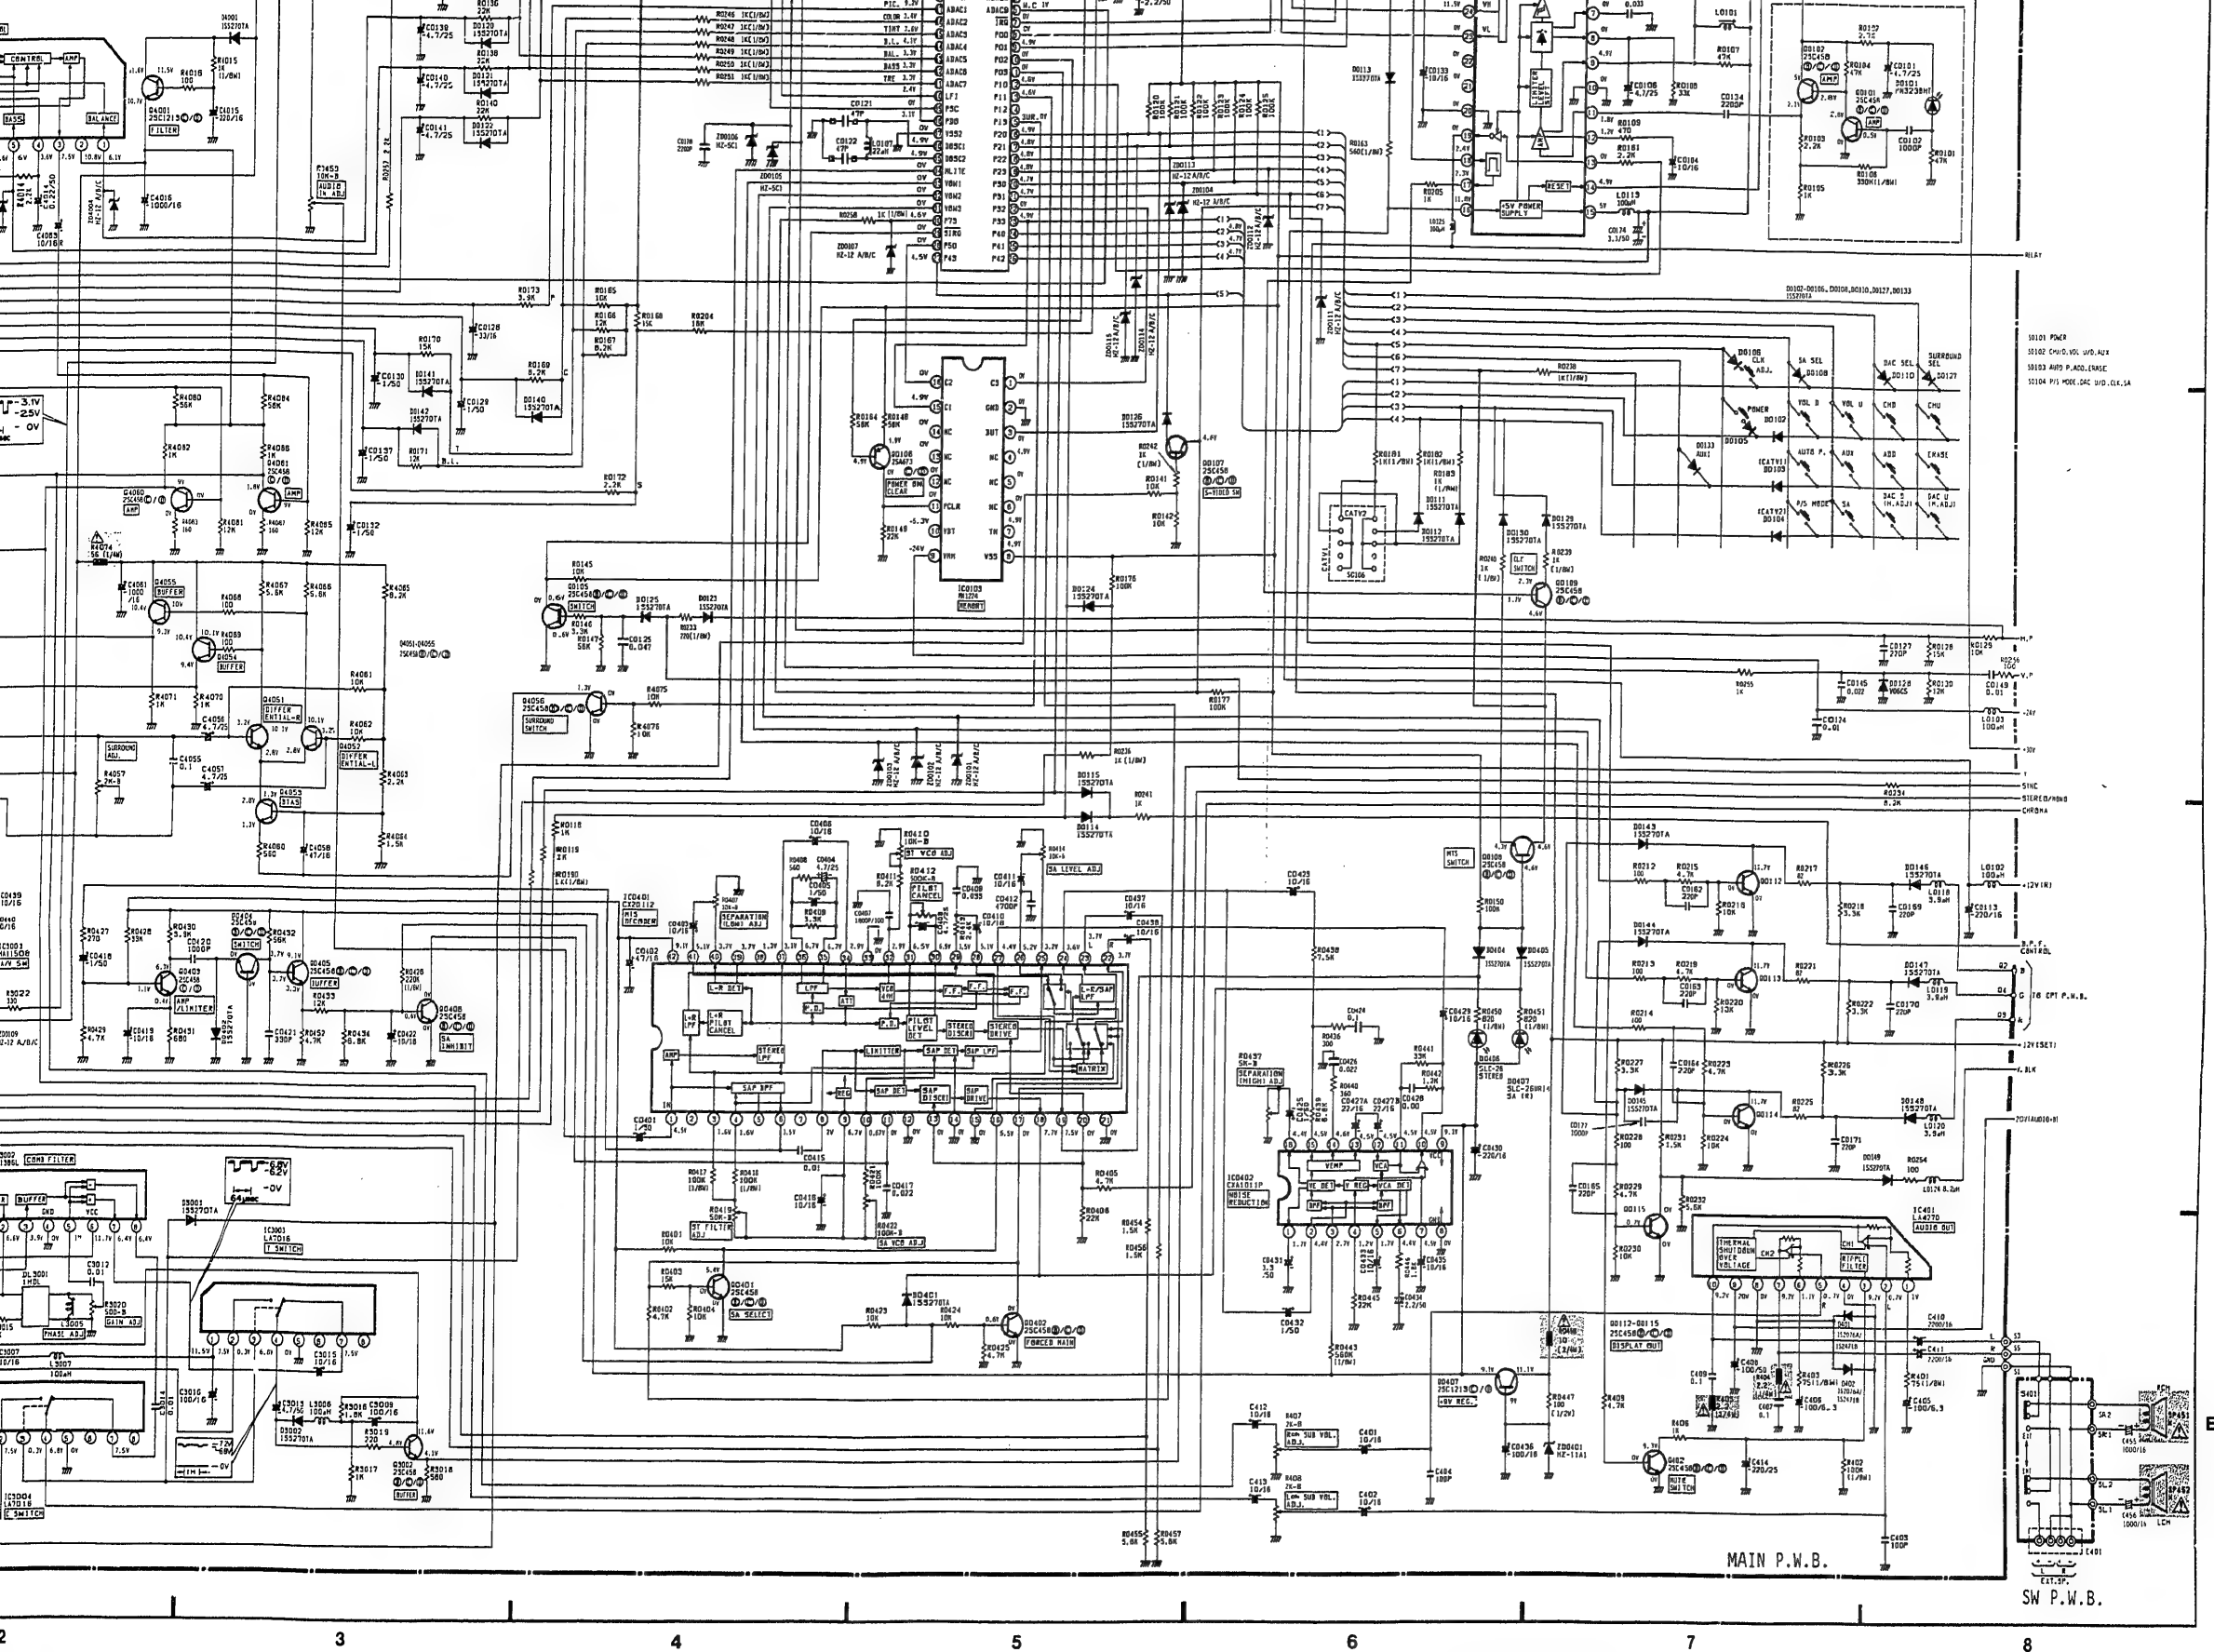

B

C


D

E


PRINTED WIRING BOARD

CT7970B/K


MAIN P.W.B.

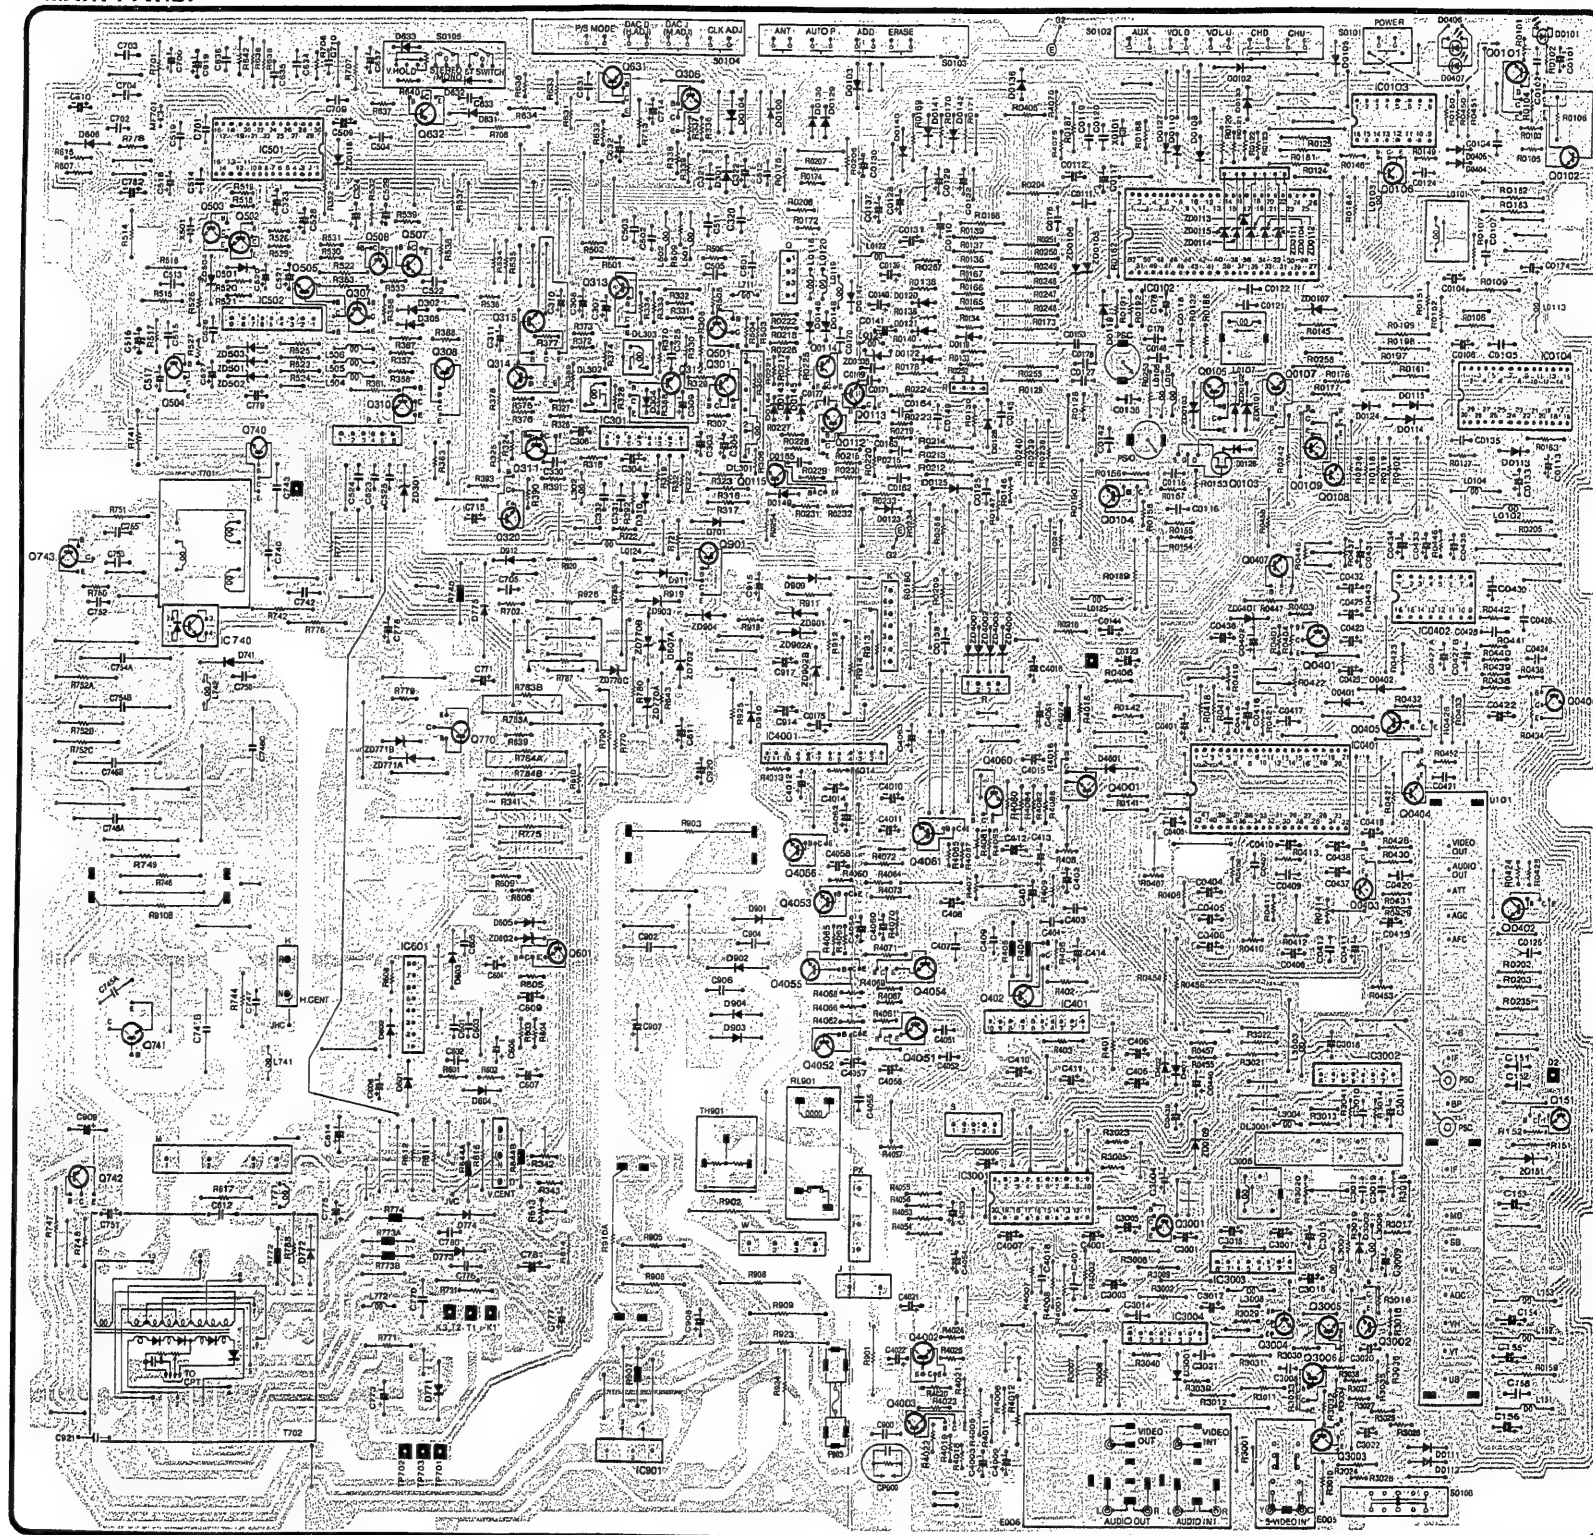


CPT P.W.B.

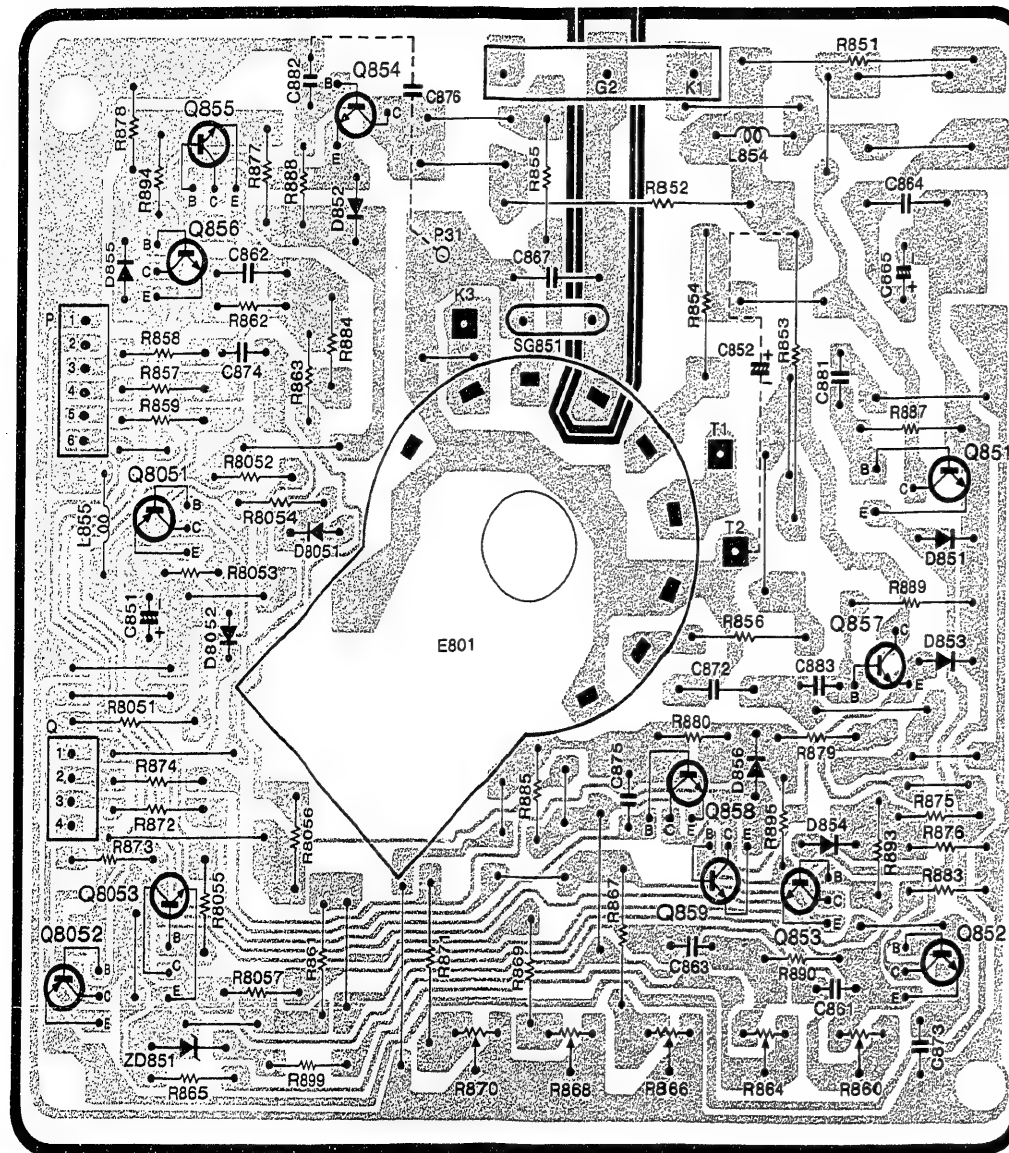


FILTER P.W.B.

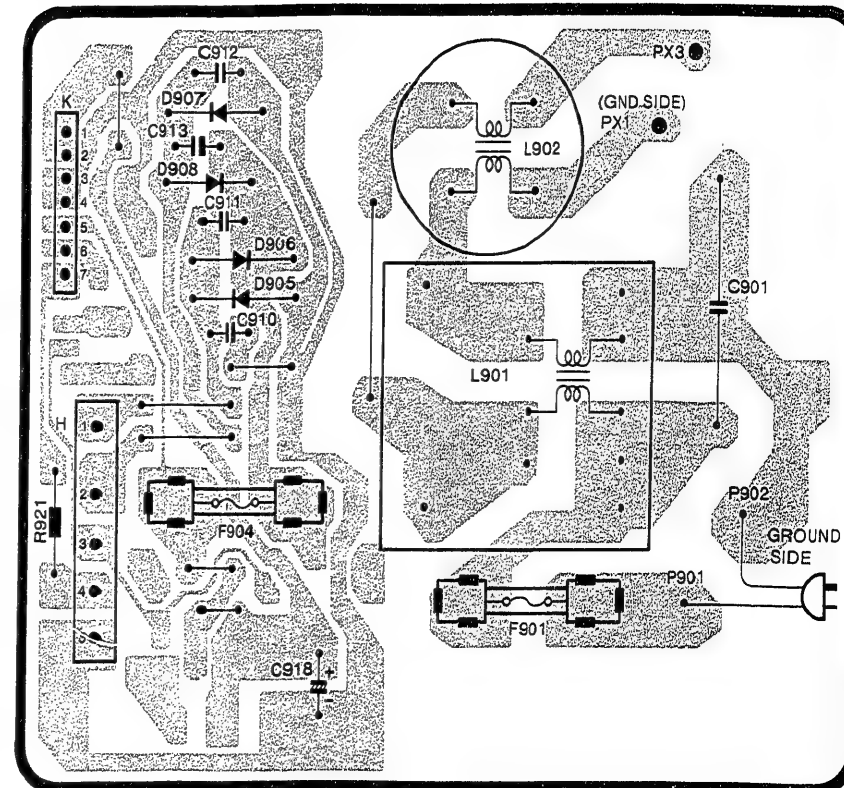

SW P.W.B.

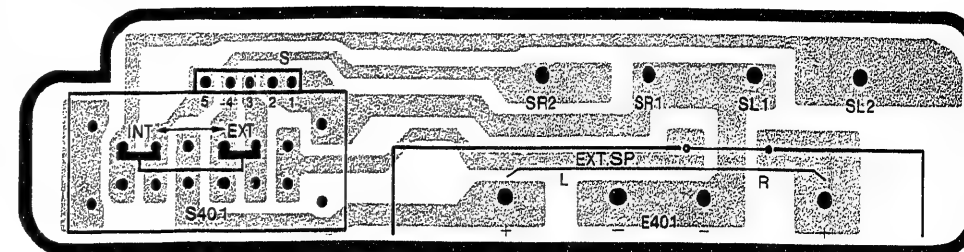

WIRING DIAGRAM

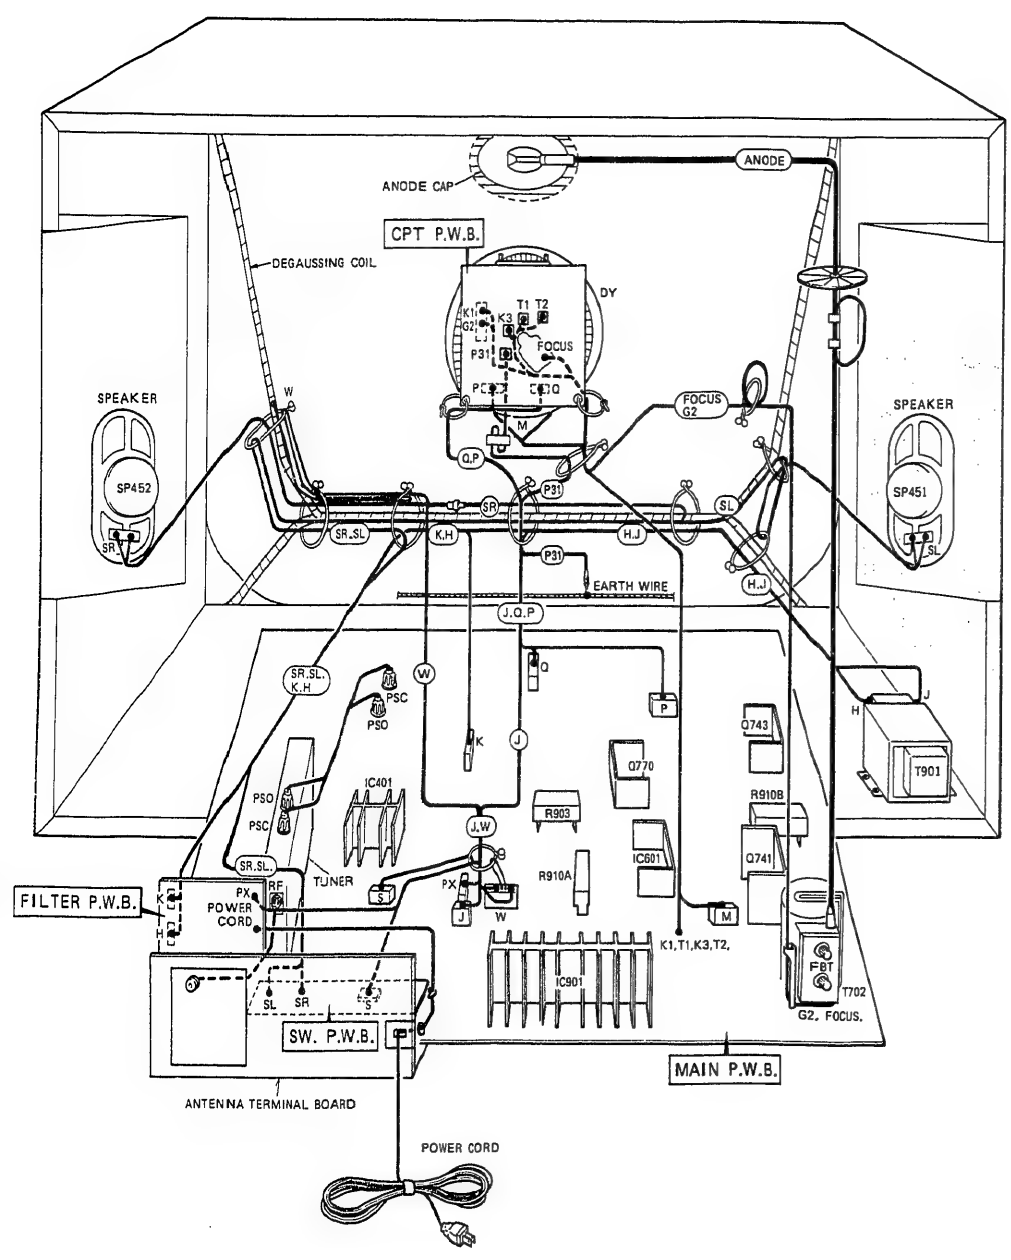

REPLACEMENT PARTS LIST

PRODUCT SAFETY NOTE: Components marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

ABBREVIATIONS: Capacitors CD: Ceramic disk, PF: Polyester film, EL: Electrolytic, PP: Polypropylene,
PR: Paper, TA: Tantalum, TM: Trimmer
Resistors..... CF: Carbon film, CC: Carbon composition, MF: Metal oxide film,
VR: Variable resistor, VW: Wire wound, FR: Fuse resistor, MG: Metal glazed
Semiconductor TR: Transistor, DI: Diode, ZD: Zener diode
VA: Varistor, TH: Thermistor, IC: IC

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
CAPACITORS;					
C0101	0800009	EL 4.7MF 25V	C0162	02486921	CD 220PF $\pm 5\%$ 50V
C0102	02441395	CD 1000PF $\pm 10\%$ 50V	C0163	02486921	CD 220PF $\pm 5\%$ 50V
C0104	0800015	EL 10MF 16V	C0164	02486921	CD 220PF $\pm 5\%$ 50V
C0105	0274769	PF 0.033MF $\pm 10\%$ 50V	C0165	02486921	CD 220PF $\pm 5\%$ 50V
C0106	0800009	EL 4.7MF 25V	C0169	0244230	CD 220PF $\pm 10\%$ 50V
C0107	0299014	PP 3600PF $\pm 2\%$ 100V	C0170	0244230	CD 220PF $\pm 10\%$ 50V
C0110	0800009	EL 4.7MF 25V	C0171	0244230	CD 220PF $\pm 10\%$ 50V
C0111	0274763	PF 0.01MF $\pm 10\%$ 50V	C0174	0800007	EL 3.3MF 50V
C0112	0800073	EL 470MF 10V	C0175	0800009	EL 4.7MF 25V
C0113	0800058	EL 220MF 16V	C0176	02441051	CD 2200PF $\pm 10\%$ 50V
C0115	02747715	PF 0.047MF $\pm 10\%$ 50V	C0177	02441395	CD 1000PF $\pm 10\%$ 50V
C0116	0276345	PF 0.22MF $\pm 10\%$ 50V	C0178	0244105	CD 2200PF $\pm 10\%$ 50V
C0117	0800005	EL 2.2MF 50V	C0401	0800003	EL 1MF 50V
C0118	0274763	PF 0.01MF $\pm 10\%$ 50V	C0402	0800041	EL 47MF 16V
C0119	02464521	CD 33PF $\pm 5\%$ 50V	C0403	0800015	EL 10MF 16V
C0120	02464521	CD 33PF $\pm 5\%$ 50V	C0404	0800009	EL 4.7MF 25V
C0121	02464561	CD 47PF $\pm 5\%$ 50V	C0405	0800003	EL 1MF 50V
C0122	02464561	CD 47PF $\pm 5\%$ 50V	C0406	0800015	EL 10MF 16V
C0123	0800058	EL 220MF 16V	C0407	0299007	PP 1800PF $\pm 2\%$ 100V
C0124	02441711	CD 0.01MF $\pm 80\%$ 50V	C0408	0800009	EL 4.7MF 25V
C0125	02747715	PF 0.047MF $\pm 10\%$ 50V	C0409	0274769	PF 0.033MF $\pm 10\%$ 50V
C0126	02747755	PF 0.1MF $\pm 10\%$ 50V	C0410	0800015	EL 10MF 16V
C0127	02486921	CD 220PF $\pm 5\%$ 50V	C0411	0800015	EL 10MF 16V
C0128	0800032	EL 33MF 16V	C0412	02441095	CD 4700PF $\pm 10\%$ 50V
C0129	0800003	EL 1MF 50V	C0415	0274763	PF 0.01MF $\pm 10\%$ 50V
C0130	0800003	EL 1MF 50V	C0416	0800015	EL 10MF 16V
C0131	0800049	EL 100MF 16V	C0417	02747675	PF 0.022MF $\pm 10\%$ 50V
C0132	0800003	EL 1MF 50V	C0418	0800003	EL 1MF 50V
C0133	0800015	EL 10MF 16V	C0419	0800015	EL 10MF 16V
C0134	02441051	CD 2200PF $\pm 10\%$ 50V	C0420	02441395	CD 1000PF $\pm 10\%$ 50V
C0135	02441395	CD 1000PF $\pm 10\%$ 50V	C0421	02486961	CD 330PF $\pm 5\%$ 50V
C0136	02464501	CD 27PF $\pm 5\%$ 50V	C0422	0800015	EL 10MF 16V
C0137	0800003	EL 1MF 50V	C0423	0800015	EL 10MF 16V
C0138	02747755	PF 0.1MF $\pm 10\%$ 50V	C0424	0274675	PF 0.1MF $\pm 5\%$ 50V
C0139	0800009	EL 4.7MF 25V	C0425	0800003	EL 1MF 50V
C0140	0800009	EL 4.7MF 25V	C0426	02746671	PF 0.022MF $\pm 5\%$ 50V
C0141	0800009	EL 4.7MF 25V	C0427A	0800023	EL 22MF 16V
C0142	02441051	CD 2200PF $\pm 10\%$ 50V	C0427B	0800023	EL 22MF 16V
C0144	0800003	EL 1MF 50V	C0428	02746555	PF 2200PF $\pm 5\%$ 50V
C0145	0274767	PF 0.022MF $\pm 10\%$ 50V	C0429	0800015	EL 10MF 16V
C0148	02464561	CD 47PF $\pm 5\%$ 50V	C0430	0800058	EL 220MF 16V
C0149	0274763	PF 0.01MF $\pm 10\%$ 50V	C0431	0800007	EL 3.3MF 50V
C0153	0244118	CD 470PF $\pm 10\%$ 50V	C0432	0800003	EL 1MF 50V
			C0433	0800015	EL 10MF 16V
			C0434	0800005	EL 2.2MF 50V

PRODUCT SAFETY NOTE: Components marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
C0435	0800015	EL 10MF 16V	C331	02441031	CD 1500PF $\pm 10\%$ 50V
C0436	0800049	EL 100MF 16V	C332	02486985	CD 560PF $\pm 5\%$ 50V
C0437	0800015	EL 10MF 16V	C4001	0800003	EL 1MF 50V
C0438	0800015	EL 10MF 16V	C4003	0800003	EL 1MF 50V
C0439	0800015	EL 10MF 16V	C4007	0800003	EL 1MF 50V
C0440	0800015	EL 10MF 16V	C4009	0800003	EL 1MF 50V
C151	0274763	PF 0.01MF $\pm 10\%$ 50V	C401	0800015	EL 10MF 16V
C152	02441051	CD 2200PF $\pm 10\%$ 50V	C4010	0800015	EL 10MF 16V
C153	0800049	EL 100MF 16V	C4011	0800015	EL 10MF 16V
C154	0800005	EL 2.2MF 50V	C4012	0253942	EL 0.22MF 50V
C155	0800005	EL 2.2MF 50V	C4014	0253942	EL 0.22MF 50V
C156	0800005	EL 2.2MF 50V	C4015	0800058	EL 220MF 16V
C158	0274763	PF 0.01MF $\pm 10\%$ 50V	C4016	0800082	EL 1000MF 16V
C178	0800009	EL 4.7MF 25V	C4017	02486845	CD 100PF $\pm 5\%$ 50V
C179	0274751	PF 1000PF $\pm 10\%$ 50V	C4018	02486845	CD 100PF $\pm 5\%$ 50V
C3001	0800015	EL 10MF 16V	C402	0800015	EL 10MF 16V
C3003	0800074	EL 470MF 16V	C4021	0800015	EL 10MF 16V
C3004	0800049	EL 100MF 16V	C4022	0800015	EL 10MF 16V
C3005	0800049	EL 100MF 16V	C403	02486845	CD 100PF $\pm 5\%$ 50V
C3006	0800015	EL 10MF 16V	C404	02486845	CD 100PF $\pm 5\%$ 50V
C3007	0800015	EL 10MF 16V	C405	0800047	EL 100MF 6.3V
C3008	0274763	PF 0.01MF $\pm 10\%$ 50V	C4051	0274763	PF 0.01MF $\pm 10\%$ 50V
C3009	0800049	EL 100MF 16V	C4052	0274763	PF 0.01MF $\pm 10\%$ 50V
C3010	02486721	CD 33PF $\pm 5\%$ 50V	C4053	0800009	EL 4.7MF 25V
C3011	0800015	EL 10MF 16V	C4054	0800009	EL 4.7MF 25V
C3012	0274763	PF 0.01MF $\pm 10\%$ 50V	C4055	02747755	PF 0.1MF $\pm 10\%$ 50V
C3013	0800012	EL 4.7MF 50V	C4056	0800009	EL 4.7MF 25V
C3014	0274763	PF 0.01MF $\pm 10\%$ 50V	C4057	0800009	EL 4.7MF 25V
C3015	0800015	EL 10MF 16V	C4058	0800041	EL 47MF 16V
C3016	0800049	EL 100MF 16V	C4059	0800015	EL 10MF 16V
C3017	0800049	EL 100MF 16V	C406	0800047	EL 100MF 6.3V
C3018	0800049	EL 100MF 16V	C4060	0800015	EL 10MF 16V
C3019	02486881	CD 150PF $\pm 5\%$ 50V	C4061	0800082	EL 1000MF 16V
C3020	0800015	EL 10MF 16V	C4062	0800015	EL 10MF 16V
C3021	0274763	PF 0.01MF $\pm 10\%$ 50V	C4063	0800015	EL 10MF 16V
C3022	0800015	EL 10MF 16V	C407	02747755	PF 0.1MF $\pm 10\%$ 50V
C303	0800015	EL 10MF 16V	C408	0800053	EL 100MF 50V
C304	0800009	EL 4.7MF 25V	C409	02747755	PF 0.1MF $\pm 10\%$ 50V
C305	0800015	EL 10MF 16V	C410	0800087	EL 2200MF 16V
C306	0800015	EL 10MF 16V	C411	0800087	EL 2200MF 16V
C307	0800003	EL 1MF 50V	C412	0800015	EL 10MF 16V
C308	0800015	EL 10MF 16V	C413	0800015	EL 10MF 16V
C309	0800074	EL 470MF 16V	C414	0800059	EL 220MF 25V
C310	0800015	EL 10MF 16V	C455	0800082	EL 1000MF 16V
C311	0800049	EL 100MF 16V	C456	0800082	EL 1000MF 16V
C320	0274763	PF 0.01MF $\pm 10\%$ 50V	C501	02486871	CD 130PF $\pm 5\%$ 50V
C321	0274763	PF 0.01MF $\pm 10\%$ 50V	C502	02486761	CD 47PF $\pm 5\%$ 50V
C322	0800003	EL 1MF 50V	C503	02486841	CD 100PF $\pm 5\%$ 50V
C323	0800003	EL 1MF 50V	C504	0274763	PF 0.01MF $\pm 10\%$ 50V
C324	0800009	EL 4.7MF 25V	C505	02486961	CD 330PF $\pm 5\%$ 50V
C325	02486961	CD 330PF $\pm 5\%$ 50V	C509	0800009	EL 4.7MF 25V
C330	02486981	CD 560PF $\pm 5\%$ 50V	C511	0274763	PF 0.01MF $\pm 10\%$ 50V

PRODUCT SAFETY NOTE: Components marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
C512	0274763	PF 0.01MF $\pm 10\%$ 50V	Δ C745B	0299794	PP 0.01MF $\pm 5\%$ 1.6KV
C513	02747755	PF 0.1MF $\pm 10\%$ 50V	Δ C746A	02999285	PP 0.15MF $\pm 10\%$ 200V
C514	02464481	CD 22PF $\pm 5\%$ 50V	Δ C746B	02999285	PF 0.15MF $\pm 10\%$ 200V
C515	02747655	PF 0.015MF $\pm 10\%$ 50V	Δ C746C	0299927	PP 0.12MF $\pm 10\%$ 200V
C516	0800005	EL 2.2MF 50V	C747	02435071	CD 330PF $\pm 10\%$ 500V
C517	0800005	EL 2.2MF 50V	C750	02445015	CD 1000PF $\pm 10\%$ 500V
C518	0800074	EL 470MF 16V	C751	0800041	EL 47MF 16V
C519	02747755	PF 0.1MF $\pm 10\%$ 50V	C752	02441711	CD 0.01MF $\pm 80\%$ 50V
C520	0800003	EL 1MF 50V	C753	02445015	CD 1000PF $\pm 10\%$ 500V
C521	0800003	EL 1MF 50V	Δ C754A	02999315	PP 0.27MF $\pm 10\%$ 200V
C522	02490935	CD 470PF $\pm 5\%$ 50V	Δ C754B	02999305	PP 0.22MF $\pm 10\%$ 200V
C523	02441185	CD 470PF $\pm 10\%$ 50V	C755	02441165	CD 180PF $\pm 10\%$ 50V
C524	02441185	CD 470PF $\pm 10\%$ 50V	C770	02747755	PF 0.1MF $\pm 10\%$ 50V
C525	02441185	CD 470PF $\pm 10\%$ 50V	C771	0800026	EL 22MF 50V
C526	0274763	PF 0.01MF $\pm 10\%$ 50V	C773	0253475	EL 47MF 250V
C527	0800049	EL 100MF 16V	Δ C775	0800055	EL 100MF 100V
C528	0800015	EL 10MF 16V	C776	0243508	CD 390PF $\pm 10\%$ 500V
C529	0800003	EL 1MF 50V	C777	0800075	EL 470MF 25V
C601	02441155	CD 560PF $\pm 10\%$ 50V	C778	0800074	EL 470MF 16V
C602	02478825	CD 33PF $\pm 10\%$ 500V	C779	0800015	EL 10MF 16V
C603	0274763	PF 0.01MF $\pm 10\%$ 50V	C780	0243508	CD 390PF $\pm 10\%$ 500V
C604	02527491	EL 330MF 50V	C781	0253934	EL 2200MF 35V
C605	0274763	PF 0.01MF $\pm 10\%$ 50V	Δ C782	0800003	EL 1MF 50V
C606	0800007	EL 3.3MF $\pm 10\%$ 50V	C851	0800049	EL 100MF 16V
C607	0253943	EL 0.33MF 50V	C852	0253473	EL 22MF 250V
C608	0800044	EL 47MF 50V	C861	02441365	CD 270PF $\pm 10\%$ 50V
C609	0253942	EL 0.22MF 50V	C862	02441365	CD 270PF $\pm 10\%$ 50V
C610	0292716F	TA 1MF $\pm 10\%$ 20V	C863	02441365	CD 270PF $\pm 10\%$ 50V
C611	0800041	EL 47MF 16V	C864	02445411	CD 0.01MF $\pm 10\%$ 500V
C612	0279853F	PF 0.033MF $\pm 10\%$ 100V	C865	0253468	EL 1MF 250V
C614	0252969	EL 2200MF 25V	C867	02442155	CD 2200PF $\pm 10\%$ 2KV
C631	02747655	PF 0.015MF $\pm 10\%$ 50V	C872	02441411	CD 0.01MF $\pm 10\%$ 50V
C632	0800023	EL 22MF 16V	C873	02486681	CD 22PF $\pm 5\%$ 50V
C633	02441395	CD 1000PF $\pm 10\%$ 50V	C874	02486681	CD 22PF $\pm 5\%$ 50V
C634	02747615	PF 6800PF $\pm 10\%$ 50V	C875	02486681	CD 22PF $\pm 5\%$ 50V
C635	02747715	PF 0.047MF $\pm 10\%$ 50V	C876	0244541	CD 0.01MF $\pm 10\%$ 500V
C636	02441395	CD 1000PF $\pm 10\%$ 50V	C881	02441051	CD 2200PF $\pm 10\%$ 50V
C637	0253942	EL 0.22MF 50V	C882	02441051	CD 2200PF $\pm 10\%$ 50V
C700	0800007	EL 3.3MF 50V	C883	02441051	CD 2200PF $\pm 10\%$ 50V
C701	02441395	CD 1000PF $\pm 10\%$ 50V	Δ C900	0249389	CD 220PF $\pm 10\%$
C702	0274769	PF 0.033MF $\pm 10\%$ 50V	Δ C901	02797185	PF 0.1MF $\pm 10\%$ 125V
C703	02747675	PF 0.022MF $\pm 10\%$ 50V	C902	02445411	CD 0.01MF $\pm 10\%$ 500V
C704	02747715	PF 0.047MF $\pm 10\%$ 50V	C904	02491455	CD 4700PF $\pm 100\%$ 125V
C705	02441185	CD 470PF $\pm 10\%$ 50V	C906	02491455	CD 470PF $\pm 100\%$ 125V
C709	02441205	CD 820PF $\pm 10\%$ 50V	C907	02599771	EL 820MF 200V
C710	0244104	CD 1800PF $\pm 10\%$ 50V	C908	0252779	EL 33MF 160V
C714	0800003	EL 1MF 50V	C909	02585895	EL 100MF 160V
C715	0800003	EL 1MF 50V	C910	02441095	CD 4700PF $\pm 10\%$ 50V
C740	0279859	PF 0.1MF $\pm 10\%$ 100V	C911	02441095	CD 4700PF $\pm 10\%$ 50V
C742	02445095	CD 4700PF $\pm 10\%$ 500V	C912	02441095	CD 4700PF $\pm 10\%$ 50V
C743	02445411	CD 0.01MF $\pm 10\%$ 500V	C913	02441095	CD 4700PF $\pm 10\%$ 50V
Δ C745A	0244213	CD 1500PF $\pm 10\%$ 2KV	C914	0800075	EL 470MF 25V

PRODUCT SAFETY NOTE: Components marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
C915	0800037	EL 33MF 100V	R0156	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W
C917	0800082	EL 1000MF 16V	R0157	0700059	CF 27K OHM $\pm 5\%$ 1/16W
C918	0258603	EL 3300MF 35V	R0158	0700036	CF 470 OHM $\pm 5\%$ 1/16W
C919	0800049	EL 100MF 16V	R0159	0700051	CF 5.6K OHM $\pm 5\%$ 1/16W
C920	0800062	EL 220MF 50V	R0160	0100061	CF 680 OHM $\pm 5\%$ 1/8W
Δ C921	02491455	CD 4700PF $\pm 100\%$ 125V	R0161	0700045	CF 2.2K OHM $\pm 5\%$ 1/16W
RESISTORS;					
R0101	0700063	CF 47K OHM $\pm 5\%$ 1/16W	R0162	0700064	CF 56K OHM $\pm 5\%$ 1/16W
R0102	0700046	CF 2.7K OHM $\pm 5\%$ 1/16W	R0163	0100059	CF 560 OHM $\pm 5\%$ 1/8W
R0103	0700045	CF 2.2K OHM $\pm 5\%$ 1/16W	R0164	0700064	CF 56K OHM $\pm 5\%$ 1/16W
R0104	0700063	CF 47K OHM $\pm 5\%$ 1/16W	R0165	0700054	CF 10K OHM $\pm 5\%$ 1/16W
R0105	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R0166	0700055	CF 12K OHM $\pm 5\%$ 1/16W
R0106	0100125	CF 330K OHM $\pm 5\%$ 1/8W	R0167	0700053	CF 8.2K OHM $\pm 5\%$ 1/16W
R0107	0700063	CF 47K OHM $\pm 5\%$ 1/16W	R0168	0700056	CF 15K OHM $\pm 5\%$ 1/16W
R0108	0700061	CF 33K OHM $\pm 5\%$ 1/16W	R0169	0700053	CF 8.2K OHM $\pm 5\%$ 1/16W
R0109	0700036	CF 470 OHM $\pm 5\%$ 1/16W	R0170	0700056	CF 15K OHM $\pm 5\%$ 1/16W
R0118	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R0171	0700055	CF 12K OHM $\pm 5\%$ 1/16W
R0119	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R0172	0700045	CF 2.2K OHM $\pm 5\%$ 1/16W
R0120	0700067	CF 100K OHM $\pm 5\%$ 1/16W	R0173	0700048	CF 3.9K OHM $\pm 5\%$ 1/16W
R0121	0700067	CF 100K OHM $\pm 5\%$ 1/16W	R0174	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W
R0122	0700067	CF 100K OHM $\pm 5\%$ 1/16W	R0175	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W
R0123	0700067	CF 100K OHM $\pm 5\%$ 1/16W	R0176	0700067	CF 100K OHM $\pm 5\%$ 1/16W
R0124	0700067	CF 100K OHM $\pm 5\%$ 1/16W	R0177	0700067	CF 100K OHM $\pm 5\%$ 1/16W
R0125	0700067	CF 100K OHM $\pm 5\%$ 1/16W	R0178	01000855	CF 6.8K OHM $\pm 5\%$ 1/8W
R0127	0700048	CF 3.9K OHM $\pm 5\%$ 1/16W	R0181	01000655	CF 1K OHM $\pm 5\%$ 1/8W
R0128	0700056	CF 15K OHM $\pm 5\%$ 1/16W	R0182	01000655	CF 1K OHM $\pm 5\%$ 1/8W
R0129	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R0183	01000655	CF 1K OHM $\pm 5\%$ 1/8W
R0130	0700055	CF 12K OHM $\pm 5\%$ 1/16W	R0186	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W
R0132	0700043	CF 1.5K OHM $\pm 5\%$ 1/16W	R0187	01001175	CF 150K OHM $\pm 5\%$ 1/8W
R0133	0700058	CF 22K OHM $\pm 5\%$ 1/16W	R0188	0700032	CF 220 OHM $\pm 5\%$ 1/16W
R0134	0700055	CF 12K OHM $\pm 5\%$ 1/16W	R0189	01000655	CF 1K OHM $\pm 5\%$ 1/8W
R0135	0700058	CF 22K OHM $\pm 5\%$ 1/16W	R0190	01000655	CF 1K OHM $\pm 5\%$ 1/8W
R0136	0700058	CF 22K OHM $\pm 5\%$ 1/16W	R0191	0700027	CF 100 OHM $\pm 5\%$ 1/16W
R0137	0700058	CF 22K OHM $\pm 5\%$ 1/16W	R0192	0700041	CF 1K OHM $\pm 5\%$ 1/16W
R0138	0700058	CF 22K OHM $\pm 5\%$ 1/16W	R0197	0700027	CF 100 OHM $\pm 5\%$ 1/16W
R0139	0700058	CF 22K OHM $\pm 5\%$ 1/16W	R0198	0700027	CF 100 OHM $\pm 5\%$ 1/16W
R0140	0700058	CF 22K OHM $\pm 5\%$ 1/16W	R0199	0700027	CF 100 OHM $\pm 5\%$ 1/16W
R0141	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R0202	0700064	CF 56K OHM $\pm 5\%$ 1/16W
R0142	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R0203	0700065	CF 68K OHM $\pm 5\%$ 1/16W
R0145	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R0204	0700057	CF 18K OHM $\pm 5\%$ 1/16W
R0146	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W	R0205	0700041	CF 1K OHM $\pm 5\%$ 1/16W
R0147	0700064	CF 56K OHM $\pm 5\%$ 1/16W	R0206	01001155	CF 120K OHM $\pm 5\%$ 1/8W
R0148	0700064	CF 56K OHM $\pm 5\%$ 1/16W	R0207	01001155	CF 120K OHM $\pm 5\%$ 1/8W
R0149	0700058	CF 22K OHM $\pm 5\%$ 1/16W	R0208	0700054	CF 10K OHM $\pm 5\%$ 1/16W
R0150	0700067	CF 100K OHM $\pm 5\%$ 1/16W	R0209	01001125	CF 91K OHM $\pm 5\%$ 1/8W
R0151	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R0210	0700054	CF 10K OHM $\pm 5\%$ 1/16W
R0152	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R0212	0700027	CF 100 OHM $\pm 5\%$ 1/16W
R0153	0700064	CF 56K OHM $\pm 5\%$ 1/16W	R0213	0700027	CF 100 OHM $\pm 5\%$ 1/16W
R0154	0700052	CF 6.8K OHM $\pm 5\%$ 1/16W	R0214	0700027	CF 100 OHM $\pm 5\%$ 1/16W
R0155	0700056	CF 15K OHM $\pm 5\%$ 1/16W	R0215	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W
			R0216	0700054	CF 10K OHM $\pm 5\%$ 1/16W
			R0217	0700026	CF 82 OHM $\pm 5\%$ 1/16W
			R0218	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W

PRODUCT SAFETY NOTE: Components marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
R0219	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W	R0419	0150027	VR 50K OHM-B R-08
R0220	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R0421	0700067	CF 100K OHM $\pm 5\%$ 1/16W
R0221	0700026	CF 82 OHM $\pm 5\%$ 1/16W	R0422	01500415	VR 100K OHM-B RS-8
R0222	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W	R0423	0700054	CF 10K OHM $\pm 5\%$ 1/16W
R0223	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W	R0424	0700054	CF 10K OHM $\pm 5\%$ 1/16W
R0224	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R0425	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W
R0225	0700026	CF 82 OHM $\pm 5\%$ 1/16W	R0426	01001215	CF 220K OHM $\pm 5\%$ 1/8W
R0226	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W	R0427	0700033	CF 270 OHM $\pm 5\%$ 1/16W
R0227	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W	R0428	0700061	CF 33K OHM $\pm 5\%$ 1/16W
R0228	0700027	CF 100 OHM $\pm 5\%$ 1/16W	R0429	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W
R0229	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W	R0430	0700048	CF 3.9K OHM $\pm 5\%$ 1/16W
R0230	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R0431	0700038	CF 680 OHM $\pm 5\%$ 1/16W
R0231	0700043	CF 1.5K OHM $\pm 5\%$ 1/16W	R0432	0700064	CF 56K OHM $\pm 5\%$ 1/16W
R0232	0700051	CF 5.6K OHM $\pm 5\%$ 1/16W	R0433	0700055	CF 12K OHM $\pm 1\%$ 1/16W
R0233	01000495	CF 220 OHM $\pm 5\%$ 1/8W	R0434	0700052	CF 6.8K OHM $\pm 5\%$ 1/16W
R0234	0700053	CF 8.2K OHM $\pm 5\%$ 1/16W	R0436	01870521	CF 300 OHM $\pm 5\%$ 1/16W
R0235	0700067	CF 100K OHM $\pm 5\%$ 1/16W	R0437	01500375	VR 5K OHM-B RS-8
R0236	01000655	CF 1K OHM $\pm 5\%$ 1/8W	R0438	01870865	CF 7.5K OHM $\pm 5\%$ 1/16W
R0238	01000655	CF 1K OHM $\pm 5\%$ 1/8W	R0439	0700052	CF 6.8K OHM $\pm 5\%$ 1/16W
R0239	01000655	CF 1K OHM $\pm 5\%$ 1/8W	R0440	0187054	CF 360 OHM $\pm 5\%$ 1/16W
R0240	01000655	CF 1K OHM $\pm 5\%$ 1/8W	R0441	0700061	CF 33K OHM $\pm 5\%$ 1/16W
R0241	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R0442	0700042	CF 1.2K OHM $\pm 5\%$ 1/16W
R0242	01000655	CF 1K OHM $\pm 5\%$ 1/8W	R0443	0179619	MG 560K OHM $\pm 1\%$ 1/8W
R0246	01000655	CF 1K OHM $\pm 5\%$ 1/8W	R0445	0700058	CF 22K OHM $\pm 5\%$ 1/16W
R0247	01000655	CF 1K OHM $\pm 5\%$ 1/8W	R0446	0700044	CF 1.8K OHM $\pm 5\%$ 1/16W
R0248	01000655	CF 1K OHM $\pm 5\%$ 1/8W	R0447	01137255	CF 100 OHM $\pm 5\%$ 1/2W
R0249	01000655	CF 1K OHM $\pm 5\%$ 1/8W	R0450	01000635	CF 820 OHM $\pm 5\%$ 1/8W
R0250	01000655	CF 1K OHM $\pm 5\%$ 1/8W	R0451	01000635	CF 820 OHM $\pm 5\%$ 1/8W
R0251	01000655	CF 1K OHM $\pm 5\%$ 1/8W	R0452	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W
R0252	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R0453	01500385	VR 10K OHM-B RS-8
R0253	01000495	CF 220 OHM $\pm 5\%$ 1/8W	R0454	0700043	CF 1.5K OHM $\pm 5\%$ 1/16W
R0254	0700027	CF 100 OHM $\pm 5\%$ 1/16W	R0455	0700051	CF 5.6K OHM $\pm 5\%$ 1/16W
R0255	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R0456	0700043	CF 1.5K OHM $\pm 5\%$ 1/16W
R0256	0700027	CF 100 OHM $\pm 5\%$ 1/16W	R0457	0700051	CF 5.6K OHM $\pm 5\%$ 1/16W
R0257	0700045	CF 2.2K OHM $\pm 5\%$ 1/16W	Δ R0458	01195145	FR 10 OHM $\pm 5\%$ 1/4W
R0258	01000655	CF 1K OHM $\pm 5\%$ 1/8W	R151	01000655	CF 1K OHM $\pm 5\%$ 1/8W
R0401	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R152	0700027	CF 100 OHM $\pm 5\%$ 1/16W
R0402	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W	R3001	01000385	CF 75 OHM $\pm 5\%$ 1/8W
R0403	0700056	CF 15K OHM $\pm 5\%$ 1/16W	R3002	01000415	CF 100 OHM $\pm 5\%$ 1/8W
R0404	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R3005	0700034	CF 330 OHM $\pm 5\%$ 1/16W
R0405	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W	R3006	01137335	CF 220 OHM $\pm 5\%$ 1/2W
R0406	0700058	CF 22K OHM $\pm 5\%$ 1/16W	R3007	01000375	CF 68 OHM $\pm 5\%$ 1/8W
R0407	01500385	VR 10K OHM-B RS-8	R3008	0100113	CF 100K OHM $\pm 5\%$ 1/8W
R0408	0700037	CF 560 OHM $\pm 5\%$ 1/16W	R3009	01000415	CF 100 OHM $\pm 5\%$ 1/8W
R0409	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W	R3010	01000385	CF 75 OHM $\pm 5\%$ 1/8W
R0410	0150024	VR 10K OHM-B R-08	R3011	01000415	CF 100 OHM $\pm 5\%$ 1/8W
R0411	0700053	CF 8.2K OHM $\pm 5\%$ 1/16W	R3012	01000385	CF 75 OHM $\pm 5\%$ 1/8W
R0412	0150031	VR 500K OHM-B	R3013	0700029	CF 150 OHM $\pm 5\%$ 1/16W
R0413	01870741	CF 2.4K OHM $\pm 5\%$ 1/16W	R3014	0700035	CF 390 OHM $\pm 5\%$ 1/16W
R0414	01500385	VR 10K OHM-B RS-8	R3015	0700041	CF 1K OHM $\pm 5\%$ 1/16W
R0417	0119655	MF 100K OHM 1/8W	R3016	0700044	CF 1.8K OHM $\pm 5\%$ 1/16W
R0418	0119655	MF 100K OHM 1/8W	R3017	0700041	CF 1K OHM $\pm 5\%$ 1/16W

PRODUCT SAFETY NOTE: Components marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
R3018	0700037	CF 560 OHM $\pm 5\%$ 1/16W	R343	0700058	CF 22K OHM $\pm 5\%$ 1/16W
R3019	0700032	CF 220 OHM $\pm 5\%$ 1/16W	R352	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W
R3020	01500345	VR 500 OHM-B RS-8	R353	0700032	CF 220 OHM $\pm 5\%$ 1/16W
R3021	01000495	CF 220 OHM $\pm 5\%$ 1/8W	R356	0700034	CF 330 OHM $\pm 5\%$ 1/16W
R3022	0700034	CF 330 OHM $\pm 5\%$ 1/16W	R357	0700036	CF 470 OHM $\pm 5\%$ 1/16W
R3023	0700034	CF 330 OHM $\pm 5\%$ 1/16W	R358	0700032	CF 220 OHM $\pm 5\%$ 1/16W
R3024	01000415	CF 100 OHM $\pm 5\%$ 1/8W	R361	01141495	CF 560 OHM $\pm 5\%$ 1/4W
R3025	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R363	0700014	CF 10 OHM $\pm 5\%$ 1/16W
R3026	0700048	CF 3.9K OHM $\pm 5\%$ 1/16W	R368	0700041	CF 1K OHM $\pm 5\%$ 1/16W
R3027	01870521	CF 300 OHM $\pm 5\%$ 1/16W	R369	0700042	CF 1.2K OHM $\pm 5\%$ 1/16W
R3028	0700037	CF 560 OHM $\pm 5\%$ 1/16W	R370	0187042	CF 110 OHM $\pm 5\%$ 1/16W
R3029	01870521	CF 300 OHM $\pm 5\%$ 1/16W	R372	01870501	CF 240 OHM $\pm 5\%$ 1/16W
R3030	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R373	01870501	CF 240 OHM $\pm 5\%$ 1/16W
R3031	0700048	CF 3.9K OHM $\pm 5\%$ 1/16W	R374	0700028	CF 120 OHM $\pm 5\%$ 1/16W
R3032	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R375	0700042	CF 1.2K OHM $\pm 5\%$ 1/16W
R3033	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R376	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W
R3034	0700036	CF 470 OHM $\pm 5\%$ 1/16W	R377	0700029	CF 150 OHM $\pm 5\%$ 1/16W
R3035	0700063	CF 47K OHM $\pm 5\%$ 1/16W	R378	01141435	CF 330 OHM $\pm 5\%$ 1/4W
R3036	0700058	CF 22K OHM $\pm 5\%$ 1/16W	R387	0700052	CF 6.8K OHM $\pm 5\%$ 1/16W
R3037	0700037	CF 560 OHM $\pm 5\%$ 1/16W	R388	0700048	CF 3.9K OHM $\pm 5\%$ 1/16W
R3038	0700042	CF 1.2K OHM $\pm 5\%$ 1/16W	R390	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W
R3039	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R391	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W
R3040	0700056	CF 15K OHM $\pm 5\%$ 1/16W	R392	0700067	CF 100K OHM $\pm 5\%$ 1/16W
R3041	0700053	CF 8.2K OHM $\pm 5\%$ 1/16W	R393	0700027	CF 100 OHM $\pm 5\%$ 1/16W
R305	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R4001	01001135	CF 100K OHM $\pm 5\%$ 1/8W
R306	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R4002	01000655	CF 1K OHM $\pm 5\%$ 1/8W
R307	0700032	CF 220 OHM $\pm 5\%$ 1/16W	R4005	01001135	CF 100K OHM $\pm 5\%$ 1/8W
R308	0700037	CF 560 OHM $\pm 5\%$ 1/16W	R4006	01000655	CF 1K OHM $\pm 5\%$ 1/8W
R316	01001311	CF 560K OHM $\pm 5\%$ 1/8W	R4007	01001135	CF 100K OHM $\pm 5\%$ 1/8W
R317	01001295	CF 470K OHM $\pm 5\%$ 1/8W	R4008	01000655	CF 1K OHM $\pm 5\%$ 1/8W
R318	0700062	CF 39K OHM $\pm 5\%$ 1/16W	R401	01000385	CF 75 OHM $\pm 5\%$ 1/8W
R319	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R4011	01001135	CF 100K OHM $\pm 5\%$ 1/8W
R321	0700058	CF 22K OHM $\pm 5\%$ 1/16W	R4012	01000655	CF 1K OHM $\pm 5\%$ 1/8W
R322	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R4013	0700045	CF 2.2K OHM $\pm 5\%$ 1/16W
R323	01001335	CF 680K OHM $\pm 5\%$ 1/8W	R4014	0700045	CF 2.2K OHM $\pm 5\%$ 1/16W
R324	0700059	CF 27K OHM $\pm 5\%$ 1/16W	R4015	01000655	CF 1K OHM $\pm 5\%$ 1/8W
R325	0700067	CF 100K OHM $\pm 5\%$ 1/16W	R4016	0700027	CF 100 OHM $\pm 5\%$ 1/16W
R326	0700044	CF 1.8K OHM $\pm 5\%$ 1/16W	R4018	0700032	CF 220 OHM $\pm 5\%$ 1/16W
R327	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R4019	0700067	CF 100K OHM $\pm 5\%$ 1/16W
R328	0700042	CF 1.2K OHM $\pm 5\%$ 1/16W	R402	01001135	CF 100K OHM $\pm 5\%$ 1/8W
R329	0700036	CF 470 OHM $\pm 5\%$ 1/16W	R4020	0700067	CF 100K OHM $\pm 5\%$ 1/16W
R330	0700033	CF 270 OHM $\pm 5\%$ 1/16W	R4021	0700041	CF 1K OHM $\pm 5\%$ 1/16W
R331	0700045	CF 2.2K OHM $\pm 5\%$ 1/16W	R4022	0700032	CF 220 OHM $\pm 5\%$ 1/16W
R332	0700051	CF 5.6K OHM $\pm 5\%$ 1/16W	R4023	0700067	CF 100K OHM $\pm 5\%$ 1/16W
R333	0700051	CF 5.6K OHM $\pm 5\%$ 1/16W	R4024	0700067	CF 100K OHM $\pm 5\%$ 1/16W
R334	0700038	CF 680 OHM $\pm 5\%$ 1/16W	R4025	0700041	CF 1K OHM $\pm 5\%$ 1/16W
R336	0700042	CF 1.2K OHM $\pm 5\%$ 1/16W	R403	01000385	CF 75 OHM $\pm 5\%$ 1/8W
R337	0700027	CF 100 OHM $\pm 5\%$ 1/16W	Δ R404	01195051	FR 2.2 OHM $\pm 5\%$ 1/4W
R338	0700045	CF 2.2K OHM $\pm 5\%$ 1/16W	Δ R405	01195051	FR 2.2 OHM $\pm 5\%$ 1/4W
R339	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W	R4053	0700041	CF 1K OHM $\pm 5\%$ 1/16W
R341	0700057	CF 18K OHM $\pm 5\%$ 1/16W	R4054	0700041	CF 1K OHM $\pm 5\%$ 1/16W
R342	0150287	VR 10K OHM-B	R4055	0700053	CF 8.2K OHM $\pm 5\%$ 1/16W

PRODUCT SAFETY NOTE: Components marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
R4056	0700053	CF 8.2K OHM $\pm 5\%$ 1/16W	R528	0700051	CF 5.6K OHM $\pm 5\%$ 1/16W
R4057	01500365	VR 2K OHM-B RS-8	R529	0700033	CF 270 OHM $\pm 5\%$ 1/16W
R406	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R530	0700054	CF 10K OHM $\pm 5\%$ 1/16W
R4060	0700037	CF 560 OHM $\pm 5\%$ 1/16W	R531	0700064	CF 56K OHM $\pm 5\%$ 1/16W
R4061	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R532	0700045	CF 2.2K OHM $\pm 5\%$ 1/16W
R4062	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R533	0700054	CF 10K OHM $\pm 5\%$ 1/16W
R4063	0700045	CF 2.2K OHM $\pm 5\%$ 1/16W	R534	0700022	CF 39 OHM $\pm 5\%$ 1/16W
R4064	0700043	CF 1.5K OHM $\pm 5\%$ 1/16W	R535	01870401	CF 91 OHM $\pm 5\%$ 1/16W
R4065	0700053	CF 8.2K OHM $\pm 5\%$ 1/16W	R536	0700019	CF 27 OHM $\pm 5\%$ 1/16W
R4066	0700051	CF 5.6K OHM $\pm 5\%$ 1/16W	R537	0700067	CF 100K OHM $\pm 5\%$ 1/16W
R4067	0700051	CF 5.6K OHM $\pm 5\%$ 1/16W	R538	0700056	CF 15K OHM $\pm 5\%$ 1/16W
R4068	0700027	CF 100 OHM $\pm 5\%$ 1/16W	R539	0700054	CF 10K OHM $\pm 5\%$ 1/16W
R4069	0700027	CF 100 OHM $\pm 5\%$ 1/16W	R601	0700048	CF 3.9K OHM $\pm 5\%$ 1/16W
R407	0150036	VR 2K OHM-B RS-8	R602	0700058	CF 22K OHM $\pm 5\%$ 1/16W
R4070	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R603	0700055	CF 12K OHM $\pm 5\%$ 1/16W
R4071	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R604	0700058	CF 22K OHM $\pm 5\%$ 1/16W
R4072	0700053	CF 8.2K OHM $\pm 5\%$ 1/16W	R605	0700043	CF 1.5K OHM $\pm 5\%$ 1/16W
R4073	0700053	CF 8.2K OHM $\pm 5\%$ 1/16W	R606	0700047	CF 3.3K OHM $\pm 5\%$ 1/16W
Δ R4074	01195085	FR 56 OHM $\pm 5\%$ 1/4W	R607	0700057	CF 18K OHM $\pm 5\%$ 1/16W
R4075	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R608	0700027	CF 100 OHM $\pm 5\%$ 1/16W
R4076	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R609	0700031	CF 180 OHM $\pm 5\%$ 1/16W
R408	0150036	VR 2K OHM-B RS-8	R610	0700046	CF 2.7K OHM $\pm 5\%$ 1/16W
R4080	0700064	CF 56K OHM $\pm 5\%$ 1/16W	R611	0113686	CF 2.7 OHM $\pm 5\%$ 1/2W
R4081	0700055	CF 12K OHM $\pm 5\%$ 1/16W	R612	01136885	CF 3.3 OHM $\pm 5\%$ 1/2W
R4082	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R613	0150280	VR 200 OHM-B
R4083	01870521	CF 300 OHM $\pm 5\%$ 1/16W	R614	0700029	CF 150 OHM $\pm 5\%$ 1/16W
R4084	0700064	CF 56K OHM $\pm 5\%$ 1/16W	R615	0700054	CF 10K OHM $\pm 5\%$ 1/16W
R4085	0700055	CF 12K OHM $\pm 5\%$ 1/16W	R616	01137461	CF 680 OHM $\pm 5\%$ 1/2W
R4086	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R617	01137395	CF 390 OHM $\pm 5\%$ 1/2W
R4087	01870521	CF 300 OHM $\pm 5\%$ 1/16W	R631	0700041	CF 1K OHM $\pm 5\%$ 1/16W
R409	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W	R632	01871125	CF 91K OHM $\pm 5\%$ 1/16W
R501	0700033	CF 270 OHM $\pm 5\%$ 1/16W	R633	0700052	CF 6.8K OHM $\pm 5\%$ 1/16W
R502	01870385	CF 75 OHM $\pm 5\%$ 1/16W	R634	0700053	CF 8.2K OHM $\pm 5\%$ 1/16W
R503	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R635	01001215	CF 220K OHM $\pm 5\%$ 1/8W
R504	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R636	0700021	CF 33 OHM $\pm 5\%$ 1/16W
R505	0700049	CF 4.7K OHM $\pm 5\%$ 1/16W	R637	0700082	CF 39K OHM $\pm 5\%$ 1/16W
R506	0700034	CF 330 OHM $\pm 5\%$ 1/16W	R638	0700041	CF 1K OHM $\pm 5\%$ 1/16W
R509	0700037	CF 560 OHM $\pm 5\%$ 1/16W	R639	0700041	CF 1K OHM $\pm 5\%$ 1/16W
R514	01001295	CF 470K OHM $\pm 5\%$ 1/8W	R640	01871105	CF 75K OHM $\pm 5\%$ 1/16W
R515	01001275	CF 390K OHM $\pm 5\%$ 1/8W	R642	0700027	CF 100 OHM $\pm 5\%$ 1/16W
R516	01001311	CF 560K OHM $\pm 5\%$ 1/8W	R643	01000495	CF 220 OHM $\pm 5\%$ 1/8W
R517	0700042	CF 1.2K OHM $\pm 5\%$ 1/16W	Δ R644A	0119838	FR 0.5 OHM $\pm 5\%$ 1/4W
R518	0700032	CF 220 OHM $\pm 5\%$ 1/16W	Δ R644B	0119838	FR 0.5 OHM $\pm 5\%$ 1/4W
R519	0700032	CF 220 OHM $\pm 5\%$ 1/16W	R701	0700043	CF 1.5K OHM $\pm 5\%$ 1/16W
R520	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R702	0700046	CF 2.7K OHM $\pm 5\%$ 1/16W
R521	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R706	0700062	CF 39K OHM $\pm 5\%$ 1/16W
R522	0700054	CF 10K OHM $\pm 5\%$ 1/16W	R707	0187084	CF 6.2K OHM $\pm 5\%$ 1/16W
R523	01000535	CF 330 OHM $\pm 5\%$ 1/8W	R708	0700034	CF 330 OHM $\pm 5\%$ 1/16W
R524	01000535	CF 330 OHM $\pm 5\%$ 1/8W	R713	01001215	CF 220K OHM $\pm 5\%$ 1/8W
R525	01000535	CF 330 OHM $\pm 5\%$ 1/8W	R721	0700054	CF 10K OHM $\pm 5\%$ 1/16W
R526	0700041	CF 1K OHM $\pm 5\%$ 1/16W	R722	0700054	CF 10K OHM $\pm 5\%$ 1/16W
R527	0700027	CF 100 OHM $\pm 5\%$ 1/16W	Δ R740	01195085	FR 56 OHM $\pm 5\%$ 1/4W

PRODUCT SAFETY NOTE: Components marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
R741	0700023	CF 47 OHM $\pm 5\%$ 1/16W	R863	01000655	CF 1K OHM $\pm 5\%$ 1/8W
R742	0113754	CF 1.5K OHM $\pm 5\%$ 1/2W	R864	01500015	VR 200 OHM-B
R744	01141635	CF 1.2K OHM $\pm 5\%$ 1/4W	R865	01000455	CF 150 OHM $\pm 5\%$ 1/8W
R746	0110229	MF 220 OHM $\pm 5\%$ 2W	R866	01500055	VR 2K OHM-B
Δ R747	0119695	MF 0.47 OHM $\pm 5\%$ 1W	R867	01000535	CF 330 OHM $\pm 5\%$ 1/8W
R748	0700044	CF 1.8K OHM $\pm 5\%$ 1/16W	R868	01500055	VR 2K OHM-B
R749	01101695	MF 10K OHM $\pm 5\%$ 1W	R869	01000535	CF 330 OHM $\pm 5\%$ 1/8W
R750	0700046	CF 2.7K OHM $\pm 5\%$ 1/16W	R870	01500055	VR 2K OHM-B
R751	0100003	CF 2.7 OHM $\pm 5\%$ 1/8W	R871	01000535	CF 330 OHM $\pm 5\%$ 1/8W
R752A	0113692	CF 4.7 OHM $\pm 5\%$ 1/2W	R872	01000435	CF 120 OHM $\pm 5\%$ 1/8W
R752B	0113692	CF 4.7 OHM $\pm 5\%$ 1/2W	R873	01000435	CF 120 OHM $\pm 5\%$ 1/8W
R752C	01136911	CF 4.3 OHM $\pm 5\%$ 1/2W	R874	01000435	CF 120 OHM $\pm 5\%$ 1/8W
Δ R770	01137891	CF 39K OHM $\pm 5\%$ 1/2W	R875	01000855	CF 6.8K OHM $\pm 5\%$ 1/8W
Δ R771	01195051	FR 2.2 OHM $\pm 5\%$ 1/4W	R876	01000795	CF 3.9K OHM $\pm 5\%$ 1/8W
Δ R772	0119838	FR 0.5 OHM $\pm 5\%$ 1/4W	R877	01000855	CF 6.8K OHM $\pm 5\%$ 1/8W
Δ R773A	01195121	FR 1 OHM $\pm 5\%$ 1/4W	R878	01000795	CF 3.9K OHM $\pm 5\%$ 1/8W
Δ R773B	01195121	FR 1 OHM $\pm 5\%$ 1/4W	R879	01000855	CF 6.8K OHM $\pm 5\%$ 1/8W
Δ R774	0119838	FR 0.5 OHM $\pm 5\%$ 1/4W	R880	01000795	CF 3.9K OHM $\pm 5\%$ 1/8W
R775	01137315	CF 180 OHM $\pm 5\%$ 1/2W	R883	01000775	CF 3.3K OHM $\pm 5\%$ 1/8W
R776	01000675	CF 1.2K OHM $\pm 5\%$ 1/8W	R884	01000775	CF 3.3K OHM $\pm 5\%$ 1/8W
Δ R777	0700031	CF 180 OHM $\pm 5\%$ 1/16W	R885	01000775	CF 3.3K OHM $\pm 5\%$ 1/8W
Δ R778	0700046	CF 2.7K OHM $\pm 5\%$ 1/16W	R887	01000355	CF 56 OHM $\pm 5\%$ 1/8W
R779	0700051	CF 5.6K OHM $\pm 5\%$ 1/16W	R888	01000355	CF 56 OHM $\pm 5\%$ 1/8W
Δ R780	0110129	MF 220 OHM $\pm 5\%$ 1W	R889	01000355	CF 56 OHM $\pm 5\%$ 1/8W
R783A	0110253	MF 2.2K OHM $\pm 5\%$ 2W	R890	01000695	CF 1.5K OHM $\pm 5\%$ 1/8W
R783B	01102511	MF 1.8K OHM $\pm 5\%$ 2W	R893	01000355	CF 56 OHM $\pm 5\%$ 1/8W
R784A	0110253	MF 2.2K OHM $\pm 5\%$ 2W	R894	01000355	CF 56 OHM $\pm 5\%$ 1/8W
R784B	01102511	MF 1.8K OHM $\pm 5\%$ 2W	R895	01000355	CF 56 OHM $\pm 5\%$ 1/8W
R785	0110253	MF 2.2K OHM $\pm 5\%$ 2W	R899	01000615	CF 680 OHM $\pm 5\%$ 1/8W
R787	01101471	MF 1.2K OHM $\pm 5\%$ 1W	Δ R901	0139015	CC 1M OHM $\pm 10\%$ 1/2W
Δ R788	01141691	CF 2.2K OHM $\pm 5\%$ 1/4W	R902	01102215	MF 100 OHM $\pm 5\%$ 2W
R790	0110261	MF 4.7K OHM $\pm 5\%$ 2W	Δ R903	0141154	VWV 2.2 OHM $\pm 10\%$ 15W
R791	01141391	CF 220 OHM $\pm 5\%$ 1/4W	R905	0110171	MF 12K OHM $\pm 5\%$ 1W
R8051	01000895	CF 10K OHM $\pm 5\%$ 1/8W	R906	01001255	CF 330K OHM $\pm 5\%$ 1/8W
R8052	01000895	CF 10K OHM $\pm 5\%$ 1/8W	Δ R907	01195085	FR 56 OHM $\pm 5\%$ 1/4W
R8053	01000895	CF 10K OHM $\pm 5\%$ 1/8W	Δ R908	0110197	MF 10 OHM $\pm 5\%$ 2W
R8054	01000895	CF 10K OHM $\pm 5\%$ 1/8W	Δ R909	0110197	MF 10 OHM $\pm 5\%$ 2W
R8055	01000895	CF 10K OHM $\pm 5\%$ 1/8W	Δ R910A	0141161	VWV 220 OHM $\pm 5\%$ 15W
R8056	01000795	CF 3.9K OHM $\pm 5\%$ 1/8W	Δ R910B	0141161	VWV 220 OHM $\pm 5\%$ 15W
R8057	01000735	CF 2.2K OHM $\pm 5\%$ 1/8W	R911	01141655	CF 1.5K OHM $\pm 5\%$ 1/4W
R851	0110367	MF 8.2K OHM $\pm 5\%$ 3W	R912	0700057	CF 18K OHM $\pm 5\%$ 1/16W
R852	0110367	MF 8.2K OHM $\pm 5\%$ 3W	R913	01101435	MF 820 OHM $\pm 5\%$ 1W
R853	0110367	MF 8.2K OHM $\pm 5\%$ 3W	R914	0110229	MF 220 OHM $\pm 5\%$ 2W
R854	0113754	CF 1.5K OHM $\pm 5\%$ 1/2W	R918	0700054	CF 10K OHM $\pm 5\%$ 1/16W
R855	0113754	CF 1.5K OHM $\pm 5\%$ 1/2W	R919	01141635	CF 1.2K OHM $\pm 5\%$ 1/4W
R856	0113754	CF 1.5K OHM $\pm 5\%$ 1/2W	R920	01000515	CF 270 OHM $\pm 5\%$ 1/8W
R857	01000535	CF 330 OHM $\pm 5\%$ 1/8W	Δ R921	01195145	FR 10 OHM $\pm 5\%$ 1/4W
R858	01000535	CF 330 OHM $\pm 5\%$ 1/8W	Δ R923	0110197	MF 10 OHM $\pm 5\%$ 2W
R859	01000535	CF 330 OHM $\pm 5\%$ 1/8W	R924	0139015	CC 1M OHM $\pm 10\%$ 1/2W
R860	01500015	VR 200 OHM-B	R925	01137461	CF 680 OHM $\pm 5\%$ 1/2W
R861	01000435	CF 120 OHM $\pm 5\%$ 1/8W	R926	0110121	MF 100 OHM $\pm 5\%$ 1W
R862	01000485	CF 200 OHM $\pm 5\%$ 1/8W			

PRODUCT SAFETY NOTE: Components marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
ICs;					
IC0102	2380661	IC MN15287HW	Q308	23206375	TR 2SA673 C/D
IC0103	2914921	IC MN1224	Q310	23205981	TR 2SC458 B/C/D
IC0104	2914961	IC HA11510NT	Q311	23205981	TR 2SC458 B/C/D
IC0401	2914931	IC CX20112	Q312	23206375	TR 2SA673 C/D
IC0402	2914941	IC CXA1011P	Q313	23205981	TR 2SC458 B/C/D
IC3001	2914951	IC HA11508	Q314	23205981	TR 2SC458 B/C/D
IC3002	2912961	IC M51386L	Q315	23205981	TR 2SC458 B/C/D
IC3003	2917611	IC LA7016	Q320	23205981	TR 2SC458 B/C/D
IC3004	2917611	IC LA7016	Q4001	23206471	TR 2SC1213 C/D
IC301	2917301	IC CX20125	Q4002	23205981	TR 2SC458 B/C/D
IC4001	2366392	IC AN5836	Q4003	23205981	TR 2SC458 B/C/D
IC401	2912561	IC LA4270	Q402	23205981	TR 2SC458 B/C/D
Δ IC501	2915192	IC LA7629	Q4051	23205981	TR 2SC458 B/C/D
IC502	2917591	IC TA8647S	Q4052	23205981	TR 2SC458 B/C/D
Δ IC601	2917361	IC UPC1498H	Q4053	23205981	TR 2SC458 B/C/D
Δ IC740	2368913	IC PC817A	Q4054	23205981	TR 2SC458 B/C/D
Δ IC901	2917802	IC STR-D3030	Q4055	23205981	TR 2SC458 B/C/D
TRANSISTORS;			Q4056	23205981	TR 2SC458 B/C/D
Q0101	23205981	TR 2SC458 B/C/D	Q4060	2320596	TR 2SC458 C/D
Q0102	23205981	TR 2SC458 B/C/D	Q4061	2320596	TR 2SC458 C/D
Q0103	2324084	TR 2SK105 E/F	Q501	23205981	TR 2SC458 B/C/D
Q0104	23206631	TR 2SC1213AC	Q502	23205981	TR 2SC458 B/C/D
Q0105	23205981	TR 2SC458 B/C/D	Q503	23205981	TR 2SC458 B/C/D
Q0106	23206375	TR 2SA673 C/D	Q504	23206471	TR 2SC1213 C/D
Q0107	23205981	TR 2SC458 B/C/D	Q505	23205981	TR 2SC458 B/C/D
Q0108	23205981	TR 2SC458 B/C/D	Q506	23205981	TR 2SC458 B/C/D
Q0109	23205981	TR 2SC458 B/C/D	Q507	23205981	TR 2SC458 B/C/D
Q0112	23205981	TR 2SC458 B/C/D	Q601	2320596	TR 2SC458 C/D
Q0113	23205981	TR 2SC458 B/C/D	Q631	23206375	TR 2SA673 C/D
Q0114	23205981	TR 2SC458 B/C/D	Q632	23206375	TR 2SA673 C/D
Q0115	23205981	TR 2SC458 B/C/D	Q740	2326216	TR 2SC3116 S/T
Q0401	23205981	TR 2SC458 B/C/D	Δ Q741	23244121	TR 2SD1455
Q0402	23205981	TR 2SC458 B/C/D	Q742	2321112	TR 2SA778AK-02
Q0403	2320596	TR 2SC458 C/D	Q743	2322223	TR 2SC2373L
Q0404	23205981	TR 2SC458 B/C/D	Q770	2323434	TR 2SC1983 O/Y
Q0405	23205981	TR 2SC458 B/C/D	Q8051	23206375	TR 2SA673 C/D
Q0406	23205981	TR 2SC458 B/C/D	Q8052	23206375	TR 2SA673 C/D
Q0407	23206471	TR 2SC1213 C/D	Q8053	2320591	TR 2SC458 B/C
Q151	2323521	TR 2SD789 B/C/D/E	Q851	23212215	TR 2SC1514
Q3001	23206471	TR 2SC1213 C/D	Q852	2320591	TR 2SC458 B/C
Q3002	23205981	TR 2SC458 B/C/D	Q853	2320591	TR 2SC458 B/C
Q3003	23205981	TR 2SC458 B/C/D	Q854	23212215	TR 2SC1514
Q3004	23205981	TR 2SC458 B/C/D	Q855	2320591	TR 2SC458 B/C
Q3005	23205981	TR 2SC458 B/C/D	Q856	2320591	TR 2SC458 B/C
Q3006	23213515	TR 2SA836/844 D/E	Q857	23212215	TR 2SC1514
Q301	23205981	TR 2SC458 B/C/D	Q858	2320591	TR 2SC458 B/C
Q306	23205981	TR 2SC458 B/C/D	Q859	2320591	TR 2SC458 B/C
Q307	23205981	TR 2SC458 B/C/D	Q901	23206375	TR 2SA673 C/D

PRODUCT SAFETY NOTE: Components marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
DIODES;					
D0101	2338171	DI PN323B-HT	D4001	23383211	DI 1SS270TA
D0102	23383211	DI 1SS270TA	D401	23303531	DI 1S2076A/1S2471B
D0103	23383211	DI 1SS270TA	D402	23303531	DI 1S2076A/1S2471B
D0104	23383211	DI 1SS270TA	D501	23383211	DI 1SS270TA
D0105	23383211	DI 1SS270TA	D601	23303525	DI 1S2076A
D0106	23383211	DI 1SS270TA	D602	23303525	DI 1S2076A
D0108	23383211	DI 1SS270TA	D603	23302565	DI V06CS
D0110	23383211	DI 1SS270TA	D604	23383211	DI 1SS270TA
D0111	23383211	DI 1SS270TA	D605	23383211	DI 1SS270TA
D0112	23383211	DI 1SS270TA	D606	23383211	DI 1SS270TA
D0113	23383211	DI 1SS270TA	D607A	23383211	DI 1SS270TA
D0114	23383211	DI 1SS270TA	D631	23383211	DI 1SS270TA
D0115	23383211	DI 1SS270TA	D632	23383211	DI 1SS270TA
D0118	23383211	DI 1SS270TA	D633	23303531	DI 1S2076A/1S2471B
D0119	23383211	DI 1SS270TA	D701	23383211	DI 1SS270TA
D0120	23383211	DI 1SS270TA	D741	2332851	DI EH1Z
D0121	23383211	DI 1SS270TA	D771	2338902	DI DFM1SA4
D0122	23383211	DI 1SS270TA	Δ D772	2338902	DI DFM1SA4
D0123	23383211	DI 1SS270TA	D773	2338161	DI DFM1A2
D0124	23383211	DI 1SS270TA	D774	2338902	DI DFM1SA4
D0125	23383211	DI 1SS270TA	D775	23394911	DI AM01Z
D0126	23383211	DI 1SS270TA	D8051	23383211	DI 1SS270TA
D0127	23383211	DI 1SS270TA	D8052	23383211	DI 1SS270TA
D0128	23302565	DI V06CS	D851	23383211	DI 1SS270TA
D0129	23383211	DI 1SS270TA	D852	23383211	DI 1SS270TA
D0130	23383211	DI 1SS270TA	D853	23383211	DI 1SS270TA
D0133	23383211	DI 1SS270TA	D854	23383211	DI 1SS270TA
D0140	23383211	DI 1SS270TA	D855	23383211	DI 1SS270TA
D0141	23383211	DI 1SS270TA	D856	23383211	DI 1SS270TA
D0142	23383211	DI 1SS270TA	Δ D901	23319911	DI R02A
D0143	23383211	DI 1SS270TA	Δ D902	23319911	DI R02A
D0144	23383211	DI 1SS270TA	Δ D903	23319911	DI R02A
D0145	23383211	DI 1SS270TA	Δ D904	23319911	DI R02A
D0146	23383211	DI 1SS270TA	Δ D905	23302565	DI V06CS
D0147	23383211	DI 1SS270TA	Δ D906	23302565	DI V06CS
D0148	23383211	DI 1SS270TA	Δ D907	23302565	DI V06CS
D0149	23383211	DI 1SS270TA	Δ D908	23302565	DI V06CS
D0401	23383211	DI 1SS270TA	D909	23394911	DI AM01Z
D0402	23383211	DI 1SS270TA	D910	23394911	DI AM01Z
D0404	23383211	DI 1SS270TA	D911	23394911	DI AM01Z
D0405	23383211	DI 1SS270TA	D912	2334581	DI ES1A
D0406	2334672	LED SLC-26	ZD0101	23311545	ZD HZ12(A)/(B)/(C)
D0407	2334671	LED SLC26UR14	ZD0102	23311545	ZD HZ12(A)/(B)/(C)
D3001	23383211	DI 1SS270TA	ZD0103	23311545	ZD HZ12(A)/(B)/(C)
D3002	23383211	DI 1SS270TA	ZD0104	23311545	ZD HZ12(A)/(B)/(C)
D301	23383211	DI 1SS270TA	ZD0105	23317975	ZD HZ5(C)1
D302	23383211	DI 1SS270TA	ZD0106	23317975	ZD HZ5(C)1
D304	23383211	DI 1SS270TA	ZD0107	23311545	ZD HZ12(A)/(B)/(C)
D305	23383211	DI 1SS270TA	ZD0108	23311545	ZD HZ12(A)/(B)/(C)
D310	23383211	DI 1SS270TA	ZD0109	23311545	ZD HZ12(A)/(B)/(C)
			ZD0111	23311545	ZD HZ12(A)/(B)/(C)
			ZD0112	23311545	ZD HZ12(A)/(B)/(C)

PRODUCT SAFETY NOTE: Components marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
ZD0113	23311545	ZD HZ12(A)/(B)/(C)	L0124	21229421	LA AXIAL COIL 8.2MICRO H \pm 10%
ZD0114	23311545	ZD HZ12(A)/(B)/(C)	L0125	2122956	LA AXIAL COIL 100MICRO H \pm 10%
ZD0115	23311545	ZD HZ12(A)/(B)/(C)	L151	2122964	LA AXIAL COIL
ZD0116	23311545	ZD HZ12(A)/(B)/(C)	L152	2122964	LA AXIAL COIL
ZD0401	2331831	ZD HZ11A	L153	2122964	LA AXIAL COIL
ZD151	23318075	ZD HZ6(C)1	L3003	21229565	LA AXIAL COIL 100MICRO H \pm 10%
ZD301	23311545	ZD HZ12(A)/(B)/(C)	L3004	2122953	LA AXIAL COIL 56MICRO H
ZD4001	23311545	ZD HZ12(A)/(B)/(C)	L3005	21411485	1H DL COIL
ZD4002	23311545	ZD HZ12(A)/(B)/(C)	L3006	21229565	LA AXIAL COIL 100MICRO H \pm 10%
ZD4003	23311545	ZD HZ12(A)/(B)/(C)	L3007	21229565	LA AXIAL COIL 100MICRO H \pm 10%
ZD4004	23311545	ZD HZ12(A)/(B)/(C)	L3008	21229565	LA AXIAL COIL 100MICRO H \pm 10%
ZD501	23311545	ZD HZ12(A)/(B)/(C)	L302	21204865	FILTER COIL 4700MICRO H
ZD502	23311545	ZD HZ12(A)/(B)/(C)	L501	21229445	LA AXIAL COIL 12MICRO H
ZD503	23311545	ZD HZ12(A)/(B)/(C)	L502	21229435	LA AXIAL COIL 10MICRO H \pm 10%
ZD504	2331829	ZD HZ9(C)3	L504	21229421	LA AXIAL COIL 8.2MICRO H \pm 10%
ZD602	2339011	ZD HZS6A1L	L505	21229421	LA AXIAL COIL 8.2MICRO H \pm 10%
ZD702	23311555	ZD HZ12(C)	L506	21229421	LA AXIAL COIL 8.2MICRO H \pm 10%
Δ ZD770A	2339251	ZD HZS36-1L	L711	21204825	FILTER COIL 100MICRO H \pm 10%
Δ ZD770B	2339251	ZD HZS36-1L	L741	2272781	HORIZONTAL LINEARITY COIL
Δ ZD770C	2339011	ZD HZS6A1L	L742	21204865	FILTER COIL 4700MICRO H
ZD771A	2331802	ZD HZ-5A2	L771	21204825	FILTER COIL 100MICRO H \pm 10%
ZD771B	23318151	ZD HZ7(B)2	L772	2124191	FIED COIL
ZD851	2331781	ZD HZ-4(A)1	L854	21222541	LA AXIAL COIL 120MICRO H
ZD901	2339222	ZD HZS27-2L	L855	21222535	LA AXIAL COIL 100MICRO H
ZD902A	2331804	ZD HZ6(B)1	Δ L901	2272292	LINE FILTER
ZD902B	23318075	ZD HZ6(C)1	Δ L902	2121674	LINE FILTER COIL
ZD903	2334021	ZD RD2.0E	Δ L905	2165741	DEGAUSSING COIL
ZD904	2339142	ZD HZS12B2L			
THERMISTORS;			TRANSFORMERS;		
Δ TH901	2340812	POSISTOR	Δ T701	2260163	HORIZONTAL DRIVE TRANSFORMER
COILS;			Δ T702	2435371	FLYBACK TRANSFORMER
DL3001	2791101	DELAY LINE	Δ T901	2214462	SOUND POWER TRANSFORMER
DL301	2165582	DELAY LINE	COMPOUND COMPONENTS;		
DL302	2165241	DELAY LINE	Δ CP900	2791903	CAPRISTOR
DL303	2165241	DELAY LINE	MF701	2791062	CERAMIC OSC
L0101	2161992	LOW FREQUENCY COIL	FUSES;		
L0102	21229565	LA AXIAL COIL 100MICRO H \pm 10%	Δ F901	2721053	FUSE 5A
L0103	21229565	LA AXIAL COIL 100MICRO H \pm 10%	Δ F903	2720819	FUSE 1.5A
L0104	21229565	LA AXIAL COIL 100MICRO H \pm 10%	Δ F904	27208141	FUSE 2A
L0105	21229371	LA AXIAL COIL 3.9MICRO H \pm 10%	MISCELLANEOUS;		
L0106	21229495	LA AXIAL COIL 33MICRO H \pm 10%		4517801	6 FLANGE NUT (CPT)
L0107	2164362	TUNING COIL		3810441	DOOR-VR (OAK)
L0113	21229565	LA AXIAL COIL 100MICRO H \pm 10%		3810442	DOOR-VR (BLACK)
L0118	21229371	LA AXIAL COIL 3.9MICRO H \pm 10%		3785043	PUSH LOCK A (POWER SW)
L0119	21229371	LA AXIAL COIL 3.9MICRO H \pm 10%			
L0120	21229371	LA AXIAL COIL 3.9MICRO H \pm 10%			
L0122	21229565	LA AXIAL COIL 100MICRO H \pm 10%			
L0123	21229565	LA AXIAL COIL 100MICRO H \pm 10%			

PRODUCT SAFETY NOTE: Components marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PARTS NO.	DESCRIPTION	SYMBOL NO.	PARTS NO.	DESCRIPTION
	41379755	4x16 ZA R SCREW (SW P.W.B.)		87814381	3x8 TAPPING SCREW (Q770)
	47707721	3 NUT (MAIN P.W.B.)		88131241	WASHER (Q770)
	3727972	HOLDER-AC LINE CORD		87114081	SCREW (Q851,Q854,Q857)
	3461841	BACK COVER ASS'Y (HCPA)		88131241	WASHER (Q851,Q854,Q857)
	0649092	WASHER (CPT)		3731081	PURSE LOCK
	3739671	CORD HOLDER		3737101	PURSE LOCK
	3118847	CABINET ASS'Y (OAK) (HCPA)		2788841	ANODE CLAMP
	3118848	CABINET ASS'Y (BLACK) (HCPA)		37637515	SK BINDER
Δ ANT	2687791	F-US TERMINAL		3794331	PRESET DRIVER
H	2661751	PLUG PIN WITH BASE		4520883	M3x12 SCREW WITH WASHER (IC401)
J	2661751	PLUG PIN WITH BASE		46156411	WEDGE
K	2663829	7P MINI-PLUG PIN		4520881	M3x8 SCREW (WITH WASHER) (IC601)
M	2665272	4P PLUG PIN WITH BASE		33309411	EARTH SPRING
P	2663825	6P MINI-PLUG PIN		37637515	SK BINDER
PX	26617525	PLUG PIN		2772211	MAGNET PIECE
S	26638245	CONNECTOR		4520881	M3x8 SCREW (WITH WASHER) (Q743)
V	26617525	PLUG PIN		88211141	NUT 3 (IC901)
W	26617535	PIN PLUG WITH BASE		41594235	M3x12 SCREW W/WASHER (IC901)
	2983121	SOCKET WITH SWITCH		4520883	M3x12 SCREW WITH WASHER (IC901)
	2983132	6PS SWITCH WITH PIN JACK	S0101	2632923	TACT SWITCH
	2771891	FERRITE BEADS CORE 003 (C0121)	S0102	2633171	TACT SWITCH
	2771891	FERRITE BEADS CORE 003 (C0122)	S0103	2633174	TACT SWITCH (3 KEY)
	2771891	FERRITE BEADS CORE 003	S0104	2633171	TACT SWITCH
		(Q852,Q855,Q858)	S0105	0150711	VR 3-GANGED WITH SWITCH
	27718931	FERRITE BEADS CORE (Q743)	S0106	2620801	SLIDE SWITCH
Δ	2982471	300-75 VHF ADAPTER	S401	2620791	SLIDE SWITCH
Δ	2970304	REMOTE CONTROL TRANSMITTER (CLU-350)	SG851	23400375	SPARK GAP
	2983011	4P PUSH TERMINAL	Δ SP451	2412591	SPEAKER 6x12
	2443082	DEFLECTION YOKE	Δ SP452	2412591	SPEAKER 6x12
	2771461	MAGNET	Δ U101	2427332	FRONTEND (F8-3813B)
	2771461	MAGNET	X0101	2787521	CRYSTAL
	2773671	CF MAGNET	X501	2790441	CRYSTAL
	2953102	CRT SOCKET	Δ RL901	2640336	RELAY
	2771892	FERRITE BEADS CORD 004 (Q851,Q854,Q857)	COLOR PICTURE TUBE;		
Δ	27202215	FUSE HOLDER (F903)	Δ V1	2358201	CPT MVA68AEC00X (HCPA)
Δ	27202215	FUSE HOLDER (F901)			
Δ	27843425	CONDENSER COVER (CP900,C900)			
Δ	27202215	FUSE HOLDER (F904)			
Δ	2742553	AC CORD			
Δ	37722015	AC CORD HOLDER			
	2667422	MINI CONNECTOR WITH WIRE (JHC, JVC)			
	27718925	FERRITE BEADS CORE 004 (CP900)			
	27718925	FERRITE BEADS CORE 004 (C921)			
	2771891	FERRITE BEADS CORE 003 (D774)			
	88212341	3 NUT (Q741)			
	88131241	WASHER (Q741)			
	27862815	MICA SHEET (Q741)			
	27863015	TRS SHEET (Q741)			
	27718925	FERRITE BEADS CORE 004 (Q741)			



HITACHI SALES CORPORATION OF AMERICA

NATIONAL HEADQUARTERS OFFICE:	401 West Artesia Blvd., Compton Calif. 90220	Tel. 213-537-8383
Western Regional Office:	401 West Artesia Blvd., Compton Calif. 90220	Tel. 213-537-8383
Eastern Regional Office:	1200 Wall St. West, Lyndhurst, N.J. 07071	Tel. 201-935-8980
Mid-Western Regional Office:	1400 Morse Ave., Elk Grove Village Chicago, ILL. 60007	Tel. 312-593-1550
Southern Regional Office:	510 Plaza DR., College Park, Georgia 30349	Tel. 404-763-0360

HITACHI SALES CORPORATION OF HAWAII, INC.

3219 Koapaka Street Honolulu, Hawaii 96819	Tel. 836-3621
--	---------------

HITACHI SALES CORPORATION DE PANAMA, S.A.

Apartado 7656, Panama 5, Calle Ramon Arias Y Calle B, Edificio Brasil 100, Nuevo Reparto el Carmen, Republic de Panama	Tel. 61-3100
---	--------------
